

<b>ECS Reset</b>	When the RESET button is pressed, all active ECS events will relinquish.
<b>CTRL</b>	When the CTRL button is pressed, this allows operator consoles to request control of the system when a remote operator console is in use.
<b>Control Requested</b>	A steady amber LED indicates a LOC-1000 is requesting control of the system.
<b>Remotely Controlled</b>	A steady amber LED indicates a remote operating console is currently in control.
<b>Locally Controlled</b>	A steady red LED indicates the local operating console is currently in control.

---

FOR SERVICE, CONTACT:

NAME: \_\_\_\_\_

COMPANY: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

TELEPHONE: \_\_\_\_\_