

## INSTALLATION MANUAL: FFT-RFH REMOTE FIREMAN'S HANDSET

### NOTICE TO THE INSTALLER

This manual provides an overview and the installation instructions for the FFT-RFH module. All terminals are power limited and should be wired in accordance with the requirements of NFPA 70 (NEC) and NFPA 72 (National Fire Alarm Code). Failure to follow the wiring diagrams in the following pages will cause the system to not operate as intended. For further information, refer to the control panel installation instructions. The module shall only be installed with listed control panels. Refer to the control panel installation manual for proper system operation.

### 1. DESCRIPTION

The FFT-RFH is remote fireman's handset used to establish 2-way communication across phone circuits between the remote areas and FFT-1000. In operation, an FFT-RFH (Remote Fireman's Handset) is plugged into an FFT-FJ (Fireman's Phone Jack) which will ring at the FFT-1000. The operator can then pick up the master handset at the FFT-1000, select the corresponding switch and establish 2-way communication with the remote handset.

### 2. TECHNICAL SPECIFICATIONS

Operating Temperature Range	32° to 120° F (0° to 49°C)
Operating Humidity Range	10% to 93% (non-condensing)

### 3. INSTALLATION

FIGURE 1. FFT-RFH CONNECTION

