

## INSTALLATION MANUAL: FFT-TC TELEPHONE STORAGE CABINET

### NOTICE TO THE INSTALLER

This manual provides an overview and the installation instructions for the FFT-TC module. All terminals are power limited and should be wired in accordance with the requirements of NFPA 70 (NEC) and NFPA 72 (National Fire Alarm Code). Failure to follow the wiring diagrams in the following pages will cause the system to not operate as intended. For further information, refer to the control panel installation instructions. The module shall only be installed with listed control panels. Refer to the control panel installation manual for proper system operation.

### 1. DESCRIPTION

The FFT-TC is a storage cabinet for fireman's handsets and is equipped with six (6) cradles.

### 2. TECHNICAL SPECIFICATIONS

Operating Temperature Range	32° to 120° F (0° to 49°C)
Operating Humidity Range	10% to 93% (non-condensing)

### 3. INSTALLATION

FIGURE 1. FFT-TC CABINET

