



All Call Paging

1. Press the CTRL button to gain control of the voice panel.
 - a. The corresponding “LOCAL” LED will illuminate red indicating control.
 - b. If the “REMOTE” LED is illuminated amber on the local panel, this indicates a remote station is currently in control.
 - c. To gain control of the system at the local panel while the remote station is actively in control, press CTRL on the local panel. The remote station must relinquish control to give the local panel control of system.
 - d. If the “REQUESTED” LED is illuminated amber on the local panel, this indicates a remote station is requesting control of the system. Deselect the CTRL button from the local panel to relinquish control and to give the remote station control of the system.
2. Press the CTRL button to gain control of the voice panel.
 - a. Upon pressing All-Call, the programmed push button(s) corresponding LEDs will illuminate green, indicating ready to page.
3. Key the microphone and wait for Ready to Page LED to illuminate green then page all programmed speaker zones.
4. When the announcement is completed, press CTRL to relinquish control.

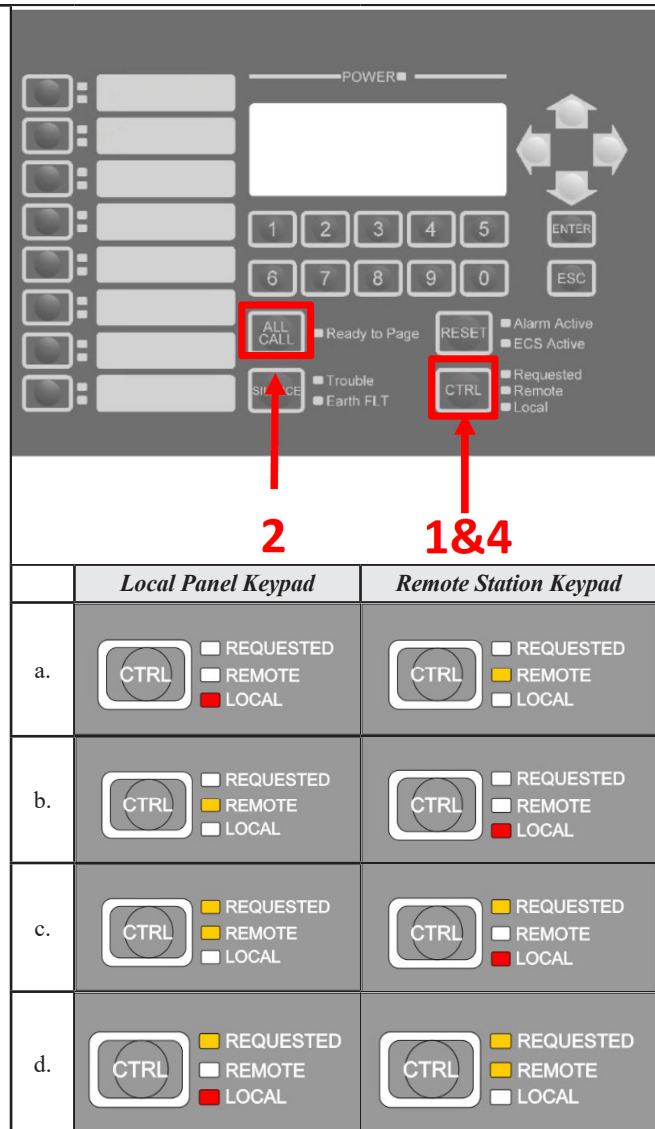


Individual Page Selection

1. Press the CTRL button to gain control of the voice panel.
 - a. The corresponding “LOCAL” LED will illuminate red indicating control.
 - b. If the “REMOTE” LED is illuminated amber on the local panel, this indicates a remote station is currently in control.
 - c. To request control of the system from the local panel while the remote station is actively in control, press CTRL on the local panel. The remote station must relinquish control to give the local panel control of system.
 - d. If the “REQUESTED” LED is illuminated amber on the local panel, this indicates a remote station is requesting control of the system. Deselect the CTRL button from the local panel to relinquish control and to give the remote station control of the system.
2. Press the desired programmed push button(s) on the keypad.
 - a. Upon pressing, the programmed button(s) corresponding LEDs will illuminate green indicating ready to page.
3. Key the microphone and wait for Ready to Page LED to illuminate green then page all programmed speaker zones.
4. When the announcement is completed, press CTRL to relinquish control.

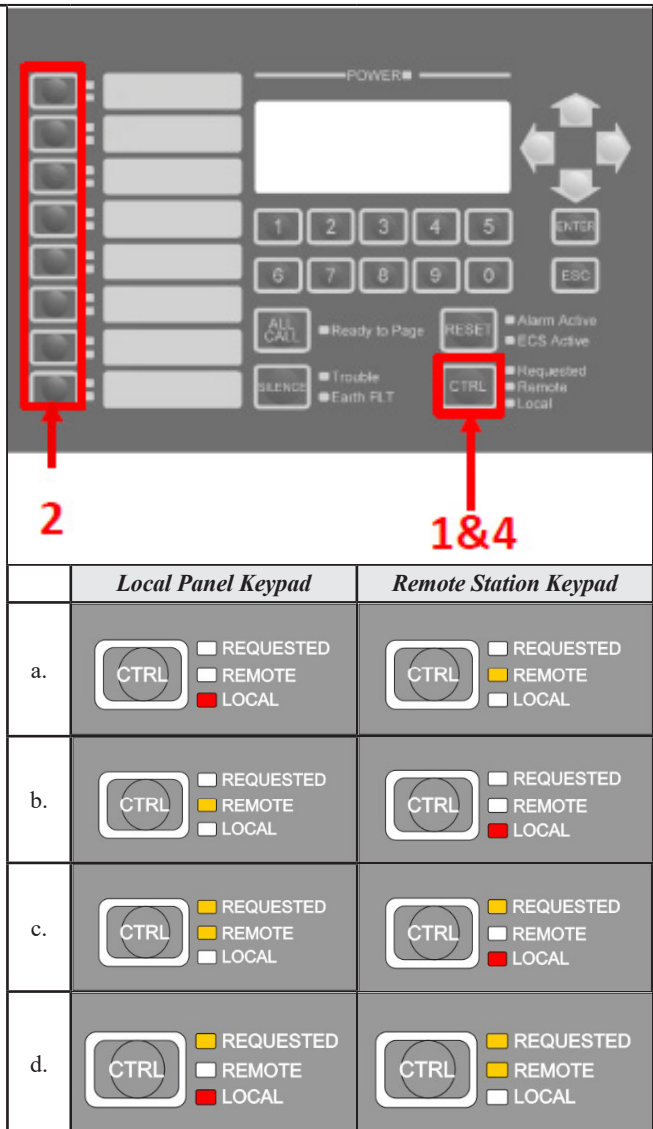


Manual ECS Message Activation

1. Press the CTRL button to gain control of the voice panel.
 - a. The corresponding “LOCAL” LED will illuminate red indicating control.
 - b. If the “REMOTE” LED is illuminated amber on the local panel, this indicates a remote station is currently in control.
 - c. To request control of the system from the local panel while the remote station is actively in control, press CTRL on the local panel. The remote station must relinquish control to give the local panel control of system.
 - d. If the “REQUESTED” LED is illuminated amber on the local panel, this indicates a remote station is requesting control of the system. Deselect the CTRL button from the local panel to relinquish control and to give the remote station control of the system.
2. Press the desired programmed ECS push button on the keypad to activate message.
 - a. The corresponding LED will illuminate green indicating message selected and red indicating message activated.
3. To relinquish control, press the CTRL push button.

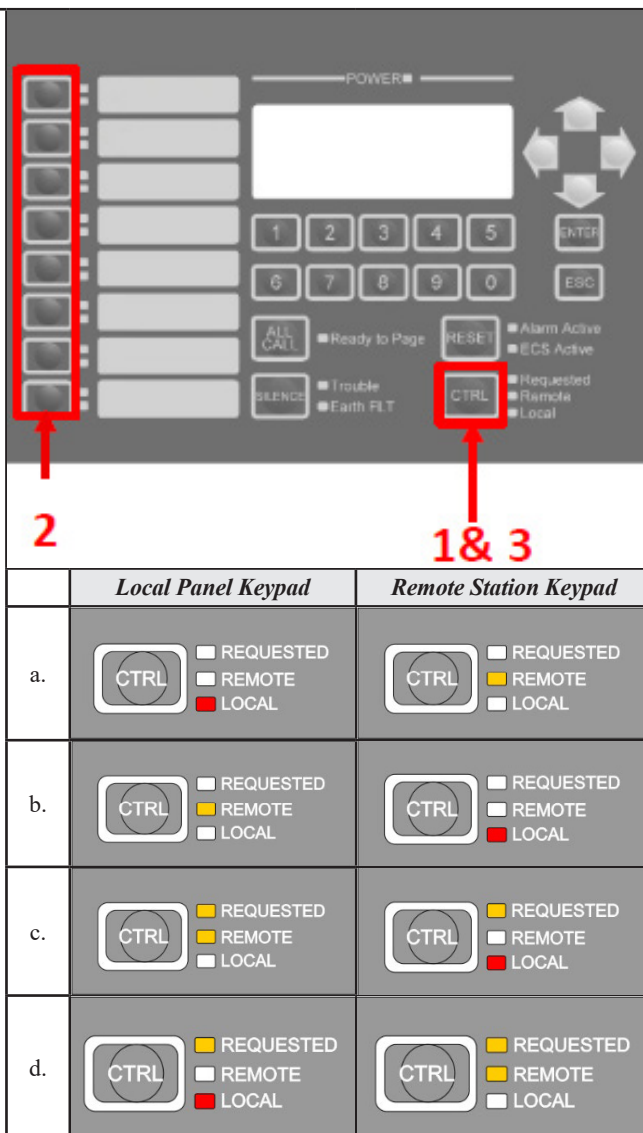


Manual ECS Reset

1. Press the RESET button to reset active ECS events

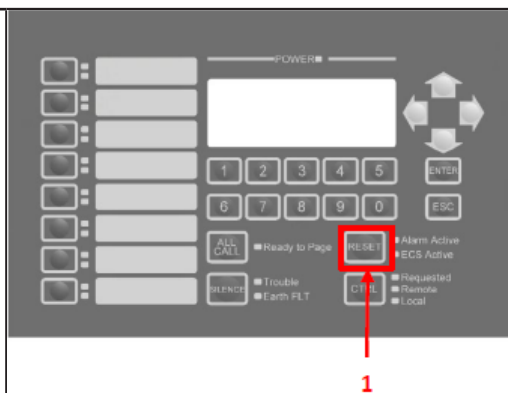

Silence Piezo (Buzzer)

1. Press the SILENCE button to silence the local piezo (buzzer) during a trouble condition.

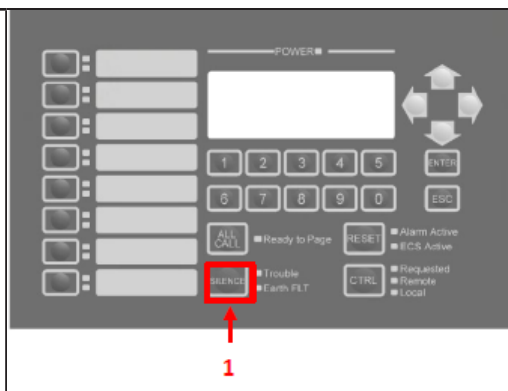

For service, contact:

Name: _____
Company: _____
Address: _____
Telephone: _____