

AFC-1000/AFC-1000V Fire Alarm Installation Manual



Potter Electric Signal Company, LLC
St. Louis, MO

Customer Service: (866) 240-1870 • Technical Support: (866) 956-1211 • Fax: (314) 595-6999


For listing information visit our website www.pottersignal.com

Document 5403649–Rev. M

3/23

1. Installation Wiring Documents

*All mentions of the AFC-1000 apply to both the AFC-1000 and the AFC-1000 other than supervisory. Supervisory is Fire Only.

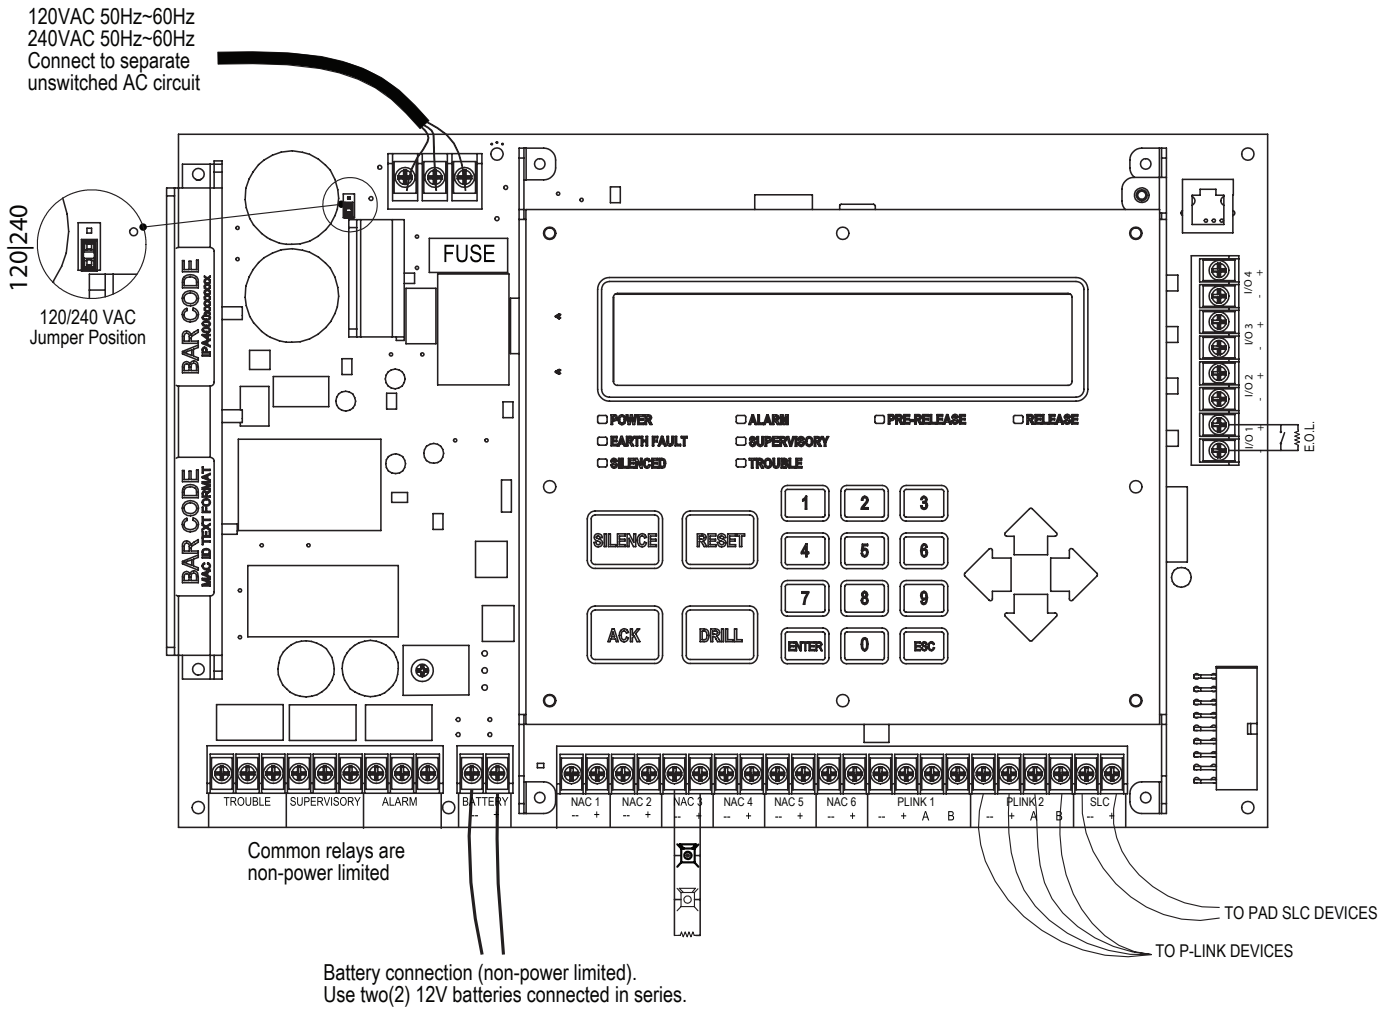

DWG #641-1

Figure 1. AFC-1000 Addressable Fire Panel Wiring Diagram

| Type of Circuit | Voltage Type | Power Type |
|-------------------------------------|--------------|-------------------|
| AC Connection | High Voltage | Non-Power Limited |
| Battery Connection | Low Voltage | Non-Power Limited |
| Trouble Relay | High Voltage | Non-Power Limited |
| Supervisory Relay | High Voltage | Non-Power Limited |
| Alarm Relay | High Voltage | Non-Power Limited |
| I/O Circuits | Low Voltage | Power Limited |
| Notification Device Circuits (NACs) | Low Voltage | Power Limited |
| P-Link RS-485 Connections | Low Voltage | Power Limited |
| Signaling Line Circuit | Low Voltage | Power Limited |
| Phone Line – DACT | High Voltage | Power Limited |

Main Supply Circuit

The AC terminals are located in the upper left hand portion of the main board. The main board supervises the main AC power and provides indication that the AC power is absent.

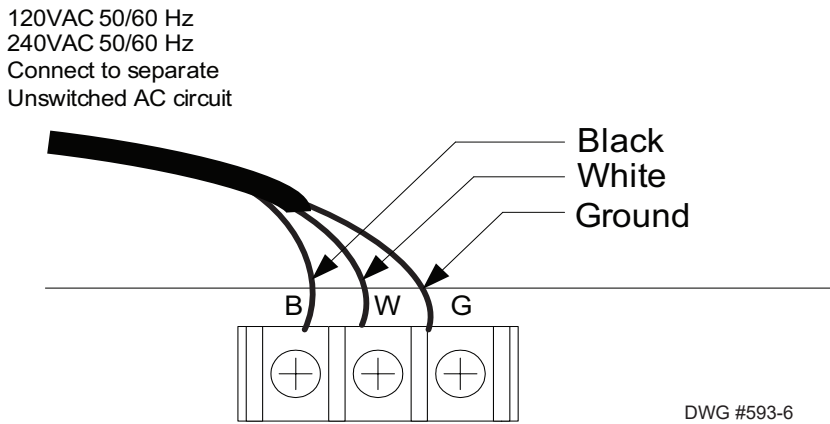


Figure 2. Main Supply Circuit

The terminals are rated at 120 VAC/240 VAC 50/60 Hertz and are marked so accordingly on the board. The earth ground connection is marked as “G” and is the furthest connection from the line voltage connection.

The AC input power ratings:

Maximum of 5A at the nominal 120 VAC rating.

Maximum of 3A at the nominal 240 VAC rating.

Rechargeable Battery Circuit

The battery charging circuit is provided on the main panel in the lower left portion of the board. Terminal connections are provided to connect wire leads for battery connection. The battery must be a recognized or listed sealed lead acid battery or equivalent.

The battery charging voltage is approximately 27.3 VDC and the circuit is supervised. The battery circuit is protected with a non-replaceable 7 amp poly switch located on the main circuit board. The maximum battery charging circuit is 1.0 amp DC.

The battery circuit is rated for 8 to 55 AH batteries and the cabinet will house up to two 18 AH batteries. The batteries will operate the panel for at least 24 hours and 5 minutes of alarm. In order to determine the minimum size batteries for standby and alarm times desired, the installer must complete a battery calculation work sheet in order to determine the minimum battery size for a particular application. For reference, the battery calculation work sheet is attached as Appendix A. Complete standby battery calculations must be completed to ensure adequate battery sizes are provided.

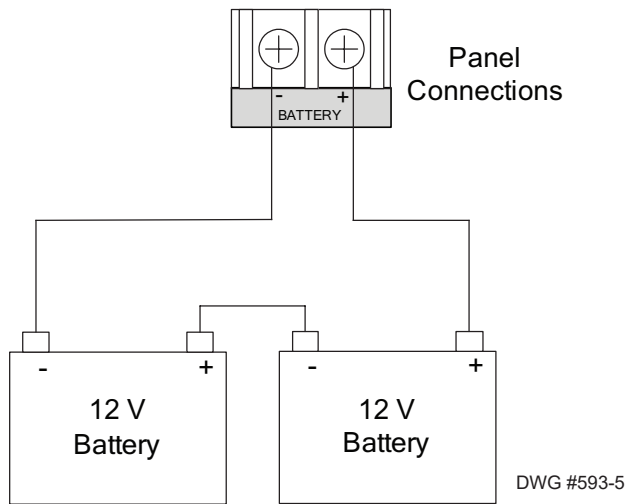


Figure 3. Battery Circuit Connections

Separation of Circuits - Power Limited, Non-Power Limited, High Voltage Wiring

The main AC power connection is considered high-voltage and non-power limited. The phone line connections to the DACT are high-voltage – power limited. Battery conductors, and the alarm, supervisory, and trouble relays are non-power limited. All remaining circuits are low-voltage, power limited connections.

Proper separation must be maintained between the circuits listed above. All separations in the different wiring must be maintained by at least 0.25 inches and the wire insulation must be for the higher voltage.

In the panel there are sufficient knock outs located around the periphery of the cabinet to allow the installer to maintain power limited and non-power limited connections. The main AC power connection should be made on the left side or top left of the cabinet. The DACT wiring connections should be made along the top right side of the cabinet.

Notification Appliance Circuits (NACs)

The panels are equipped with six NAC circuits and each are rated for a continuous 3 amps at 24 VDC. The outputs are supervised and regulated. The NACs reverse polarity upon activation and the board and illustrations are marked accordingly.

The panels can be programmable to allow for addition of a CA-6500 Class-A Expander. This expander allows for Class A operation of the NACs. Each Class A circuit is rated for a continuous 3 amps at 24 VDC. The outputs are supervised and regulated.


NAC circuits are power limited and the type of output is selectable. The NACs may be configured for strobe synchronization with AMSECO, Wheelock, Gentex, or System Sensor strobe devices as shown compatible in this document and the installation instructions.

The maximum impedance is a function of the load being applied to the circuit. In order to calculate the maximum impedance as follows:

$$(\text{Alarm Current of Notification Appliances}) \times (\text{Wire Resistance}) < 3 \text{ volts.}$$


The NAC circuits may be configured for Class A or Class B.

The panel has ground fault detection on the NAC circuits. The impedance to ground for ground fault detection is 0 ohms.

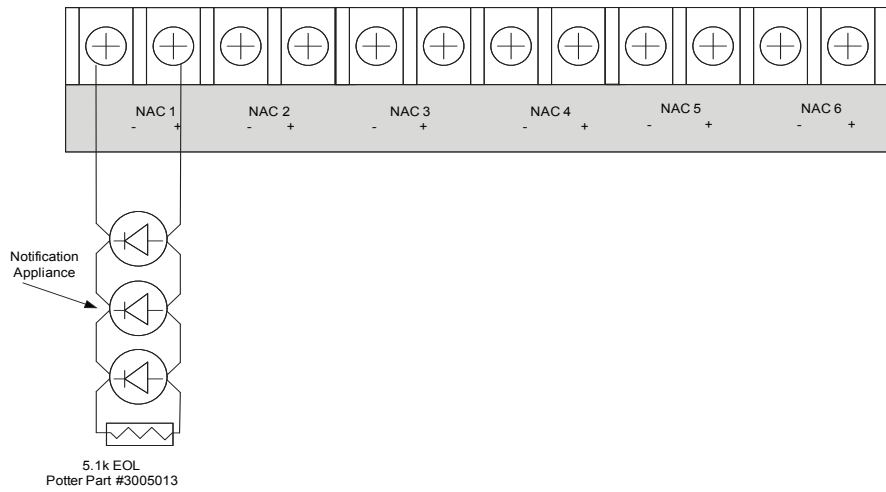

DWG #602-4

Figure 4. Class B NAC Wiring

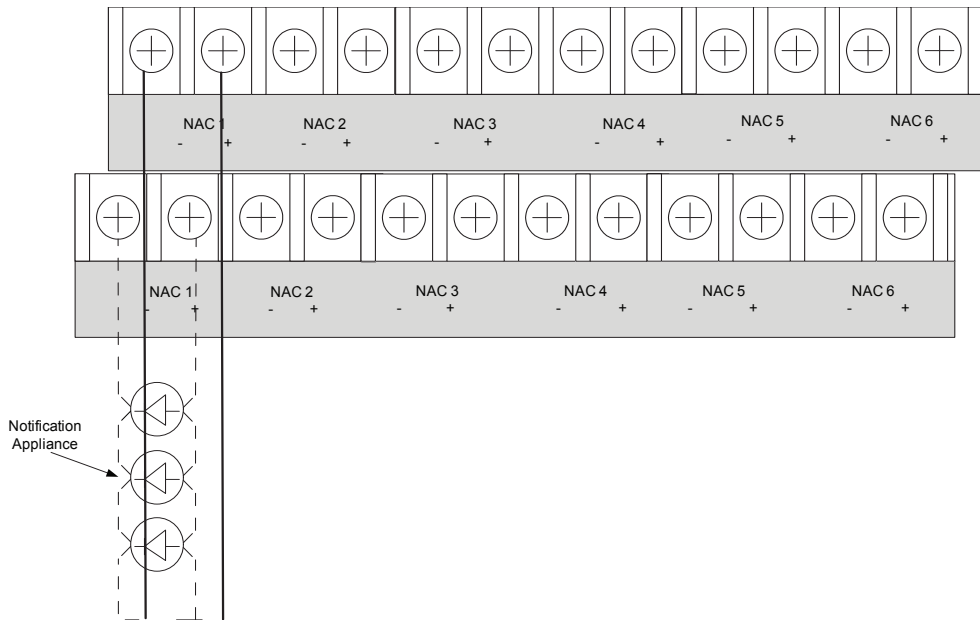

DWG #602-5

Figure 5. Class A NAC Wiring Requires CA-6500

The end of line resistor is a 5.1K ohm resistor. The resistor assembly has been evaluated in past projects and is a standard in the Potter panel product line. The Potter part number for the listed end of line assembly is 3005013 EOL Resistor Assembly.

I/O Circuits

The panels are equipped with four I/O circuits. The I/O circuits can be configured as either an input or an output. The I/O circuits can be used in Class B mode only.

I/O Circuit as Inputs

As inputs, the I/O circuits are used as a dry contact monitoring inputs, and are power limited and supervised.

Maximum wiring resistance = 100 ohms.

Maximum wiring capacitance = 1 uF.

Maximum wire length = 10,000 feet.

Maximum IDC voltage = 24 VDC

Maximum IDC current = 15 ma

The circuit can be configured for the same selection of contact input functions as the SLC MCM and SCM modules.

I/O Circuit as Outputs (NAC)

As outputs, each of the I/O circuits is rated for 1 amp continuous current at 24 VDC. The outputs are supervised and regulated. The circuits reverse polarity upon activation and the board and illustrations are marked accordingly.

The circuit is power limited and the type of output is selectable. I/O circuits may be configured for strobe synchronization with AMSECO, Wheelock, Gentex, or System Sensor strobe devices as shown compatible in this document and the installation instructions.

The maximum impedance is a function of the load being applied to the circuit. In order to calculate the maximum impedance as follows

$$(\text{Alarm Current of Notification Appliances}) \times (\text{Wire Resistance}) < 3 \text{ volts.}$$

The panels have ground fault detection on the I/O circuits. The impedance to ground for ground fault detection is 0 ohms.

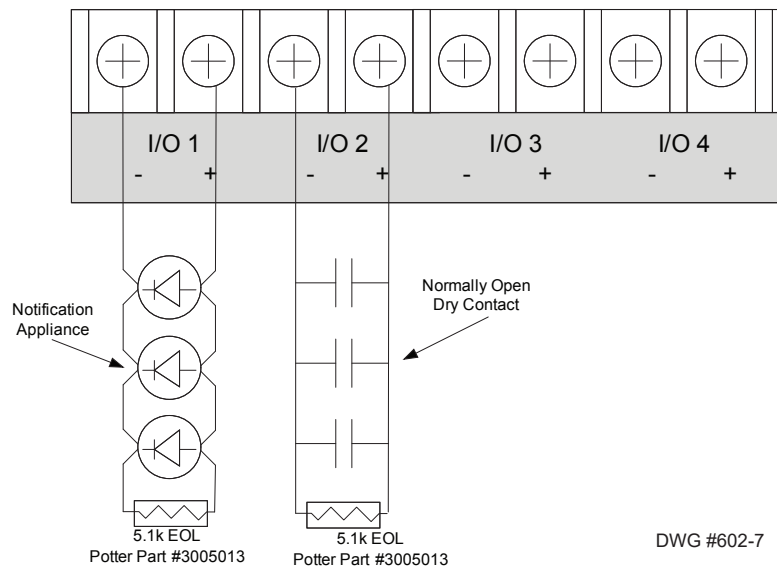


Figure 6. I/O Circuits Shown as Class B NAC / Dry Contact Input

The end of line resistor is a 5.1K ohm resistor. The resistor assembly has been evaluated in past projects and is a standard in the Potter panel product line. The Potter part number for the listed end of line assembly is 3005013 EOL Resistor Assembly.

Signaling Line Circuit (SLC)

The panels are equipped with one built-in SLC loop supporting a maximum of 127 devices. Up to 9 additional SLC loops are supported by adding the PAD100-SLCE or the SLCE-127 loop expander modules. The PAD100-SLCE supports the PAD protocol and the SLCE-127 supports the Nohmi protocol.

The addressable points may be any combination of smoke sensors, heat detectors, input modules or output modules.

The SLC provides power and communication to each of the sensors and modules connected. The SLC is fully supervised in that the communication signal is sent and must be received from each device. The entire loop is polled approximately every 4 seconds.

The voltage range for the SLC is 22-24 VDC. The power is a constant regulated connection with a maximum line resistance of 50 ohms. The SLC has a maximum loop capacitance of 0.5 micro-farads. The maximum SLCE-127 fully loaded loop current is 56.055 mA. The maximum PAD100-SLCE fully loaded loop current is 90.61 mA.

The panels have ground fault detection on the SLC circuits and addressable devices. The impedance to ground for ground fault detection is 0 ohms.

The SLC may be configured and installed as a Class A, Class X or Class B.

If the Nohmi protocol SCI short circuit isolators are installed, a total of 8 devices must be deducted from the total number of devices for each isolator installed.

All SLC wiring is low voltage and power limited.

SLC Address Programming

Addresses for all PAD protocol devices are assigned via a dipswitch on the device.

Addresses for the Nohmi protocol devices are assigned by using the hand-held programmer (part # FZAW004-P/3610053).

SLC Class X Wiring

For the PAD protocol, Class X requires a PAD100/PAD300-IB to be installed for each sensor and/or PAD100-IM to be installed on each side of each module. The maximum wiring resistance between a PAD100/PAD300-IB/PAD100-IM and another PAD100/PAD300-IB/PAD100-IM shall be less than 10 ohms and the total resistance must be below 50 ohms. The maximum wiring resistance shall be calculated based on 0.1 ohm per PAD100/PAD300-IB/PAD100-IM.

For the Nohmi protocol, Class X requires one AIB to be installed for each sensor and/or SCI to be installed on each side of each module. The maximum wiring resistance between an AIB/SCI shall be less than 10 ohms and the total resistance must be below 50 ohms. The maximum wiring resistance shall be calculated based on 0.1 ohm per AIB/SCI.

Note: Class X requires a close nipple or conduit connection to every module or sensor for both PAD and Nohmi protocols.

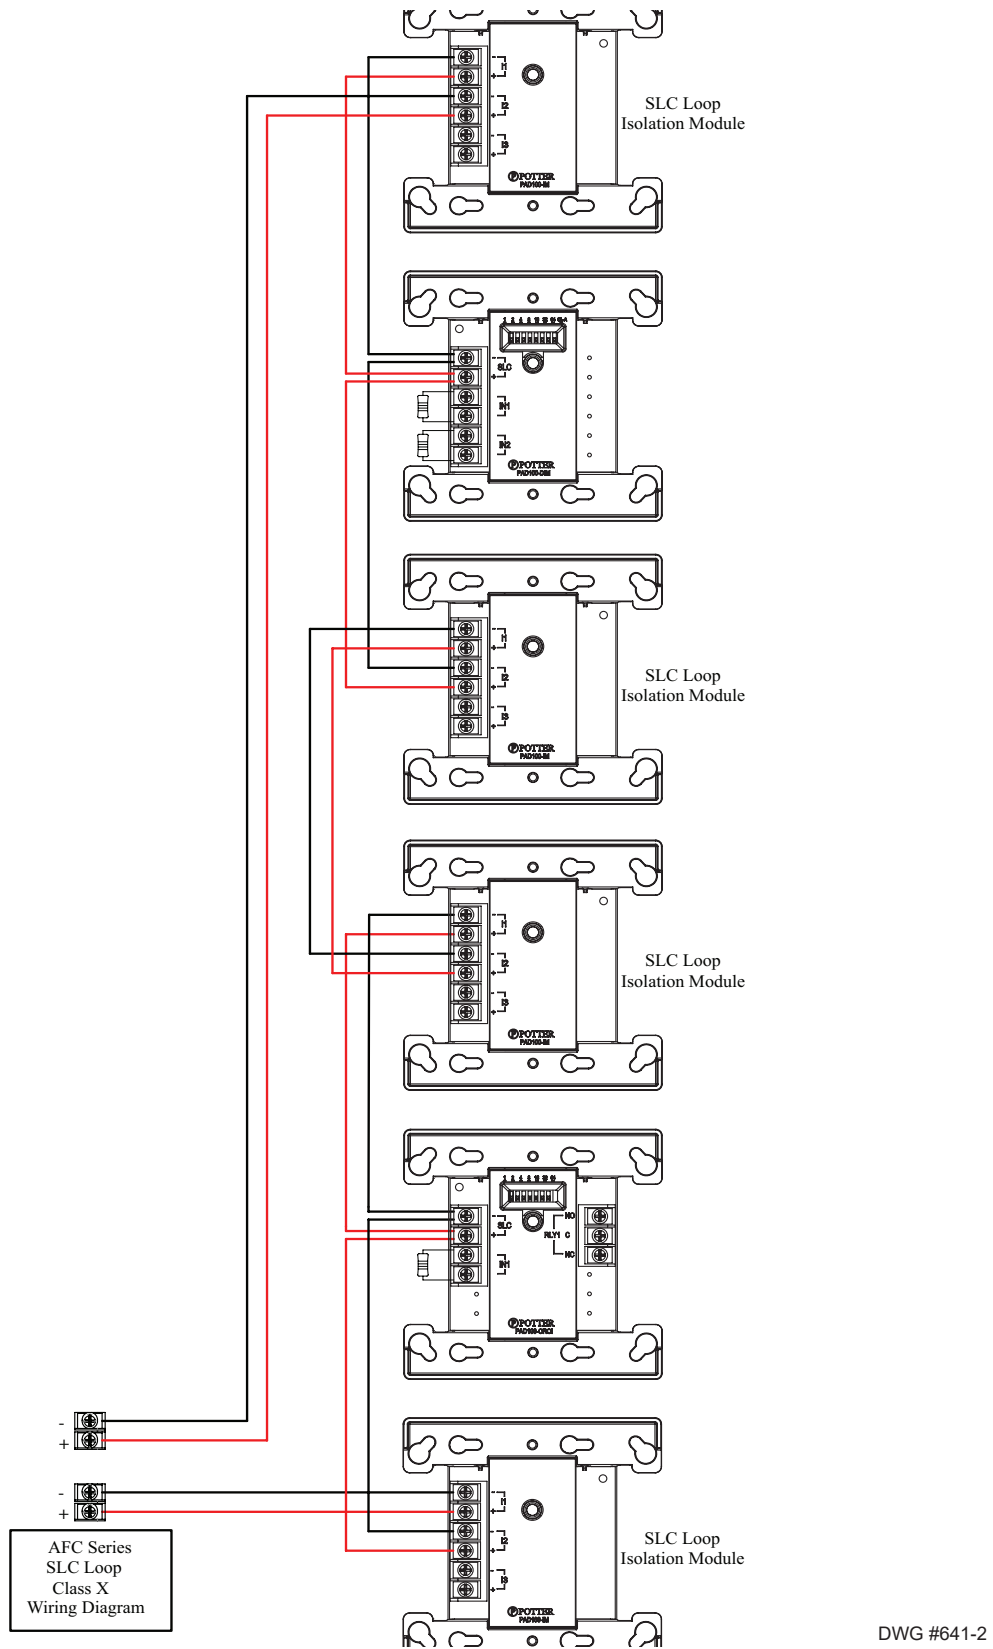


Figure 7. PAD Protocol Class X Showing PAD100-IMs Installed

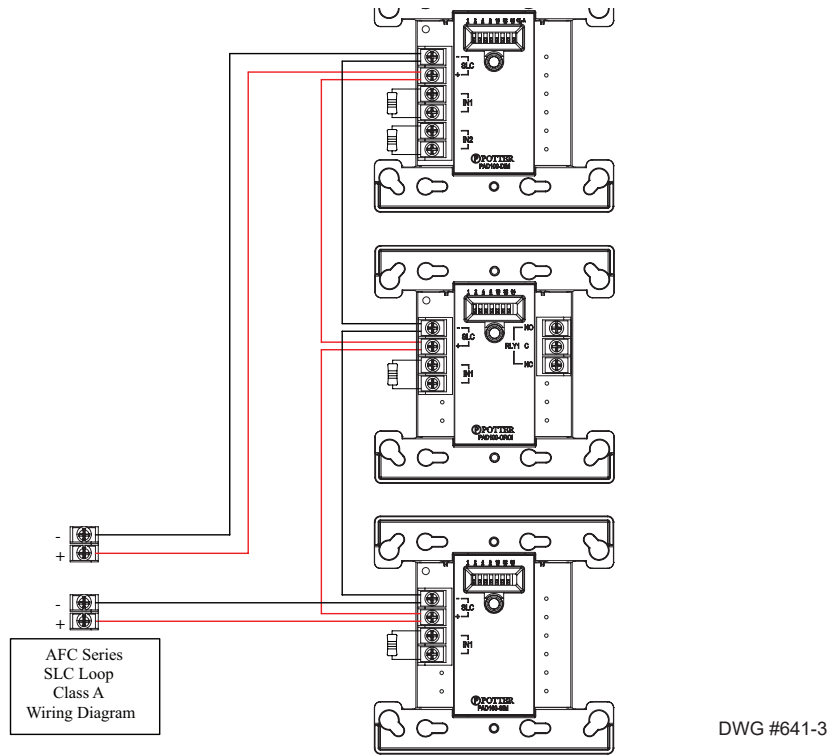


Figure 8. PAD Protocol Example of SLC as Class A

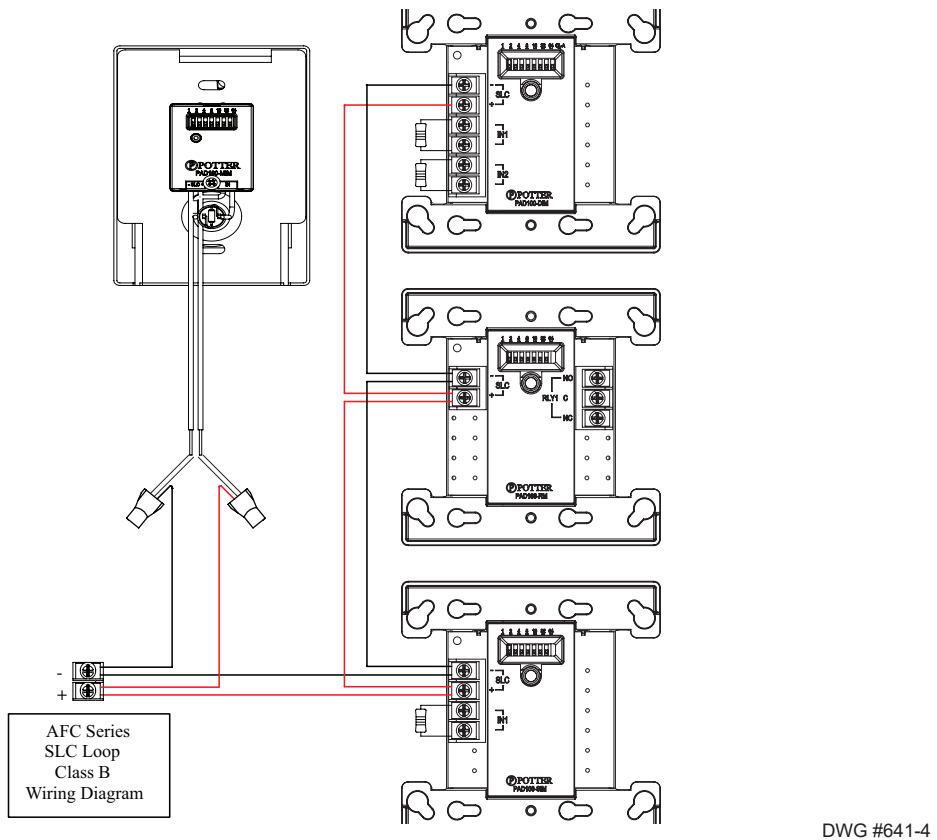


Figure 9. PAD Protocol Example of SLC as Class B

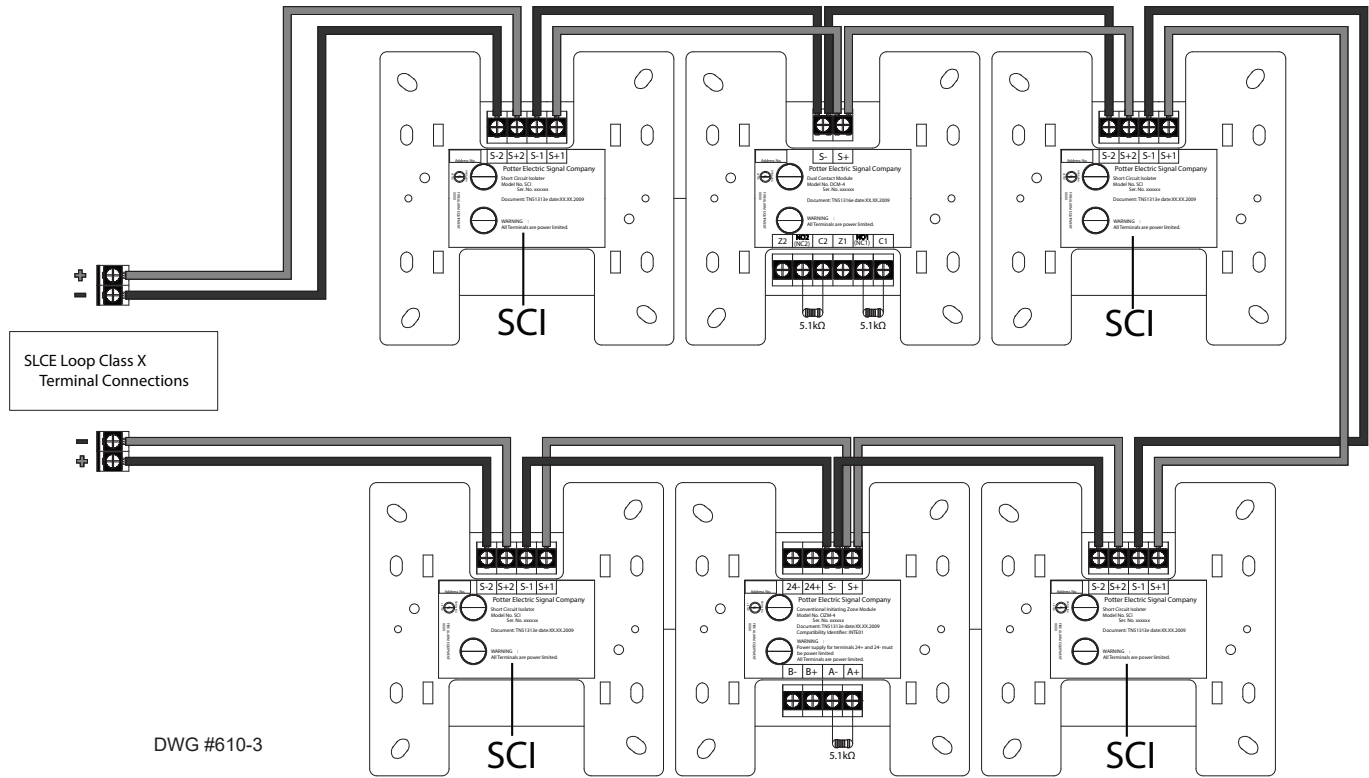


Figure 10. Nohmi Protocol Example of SLC Wired Class X

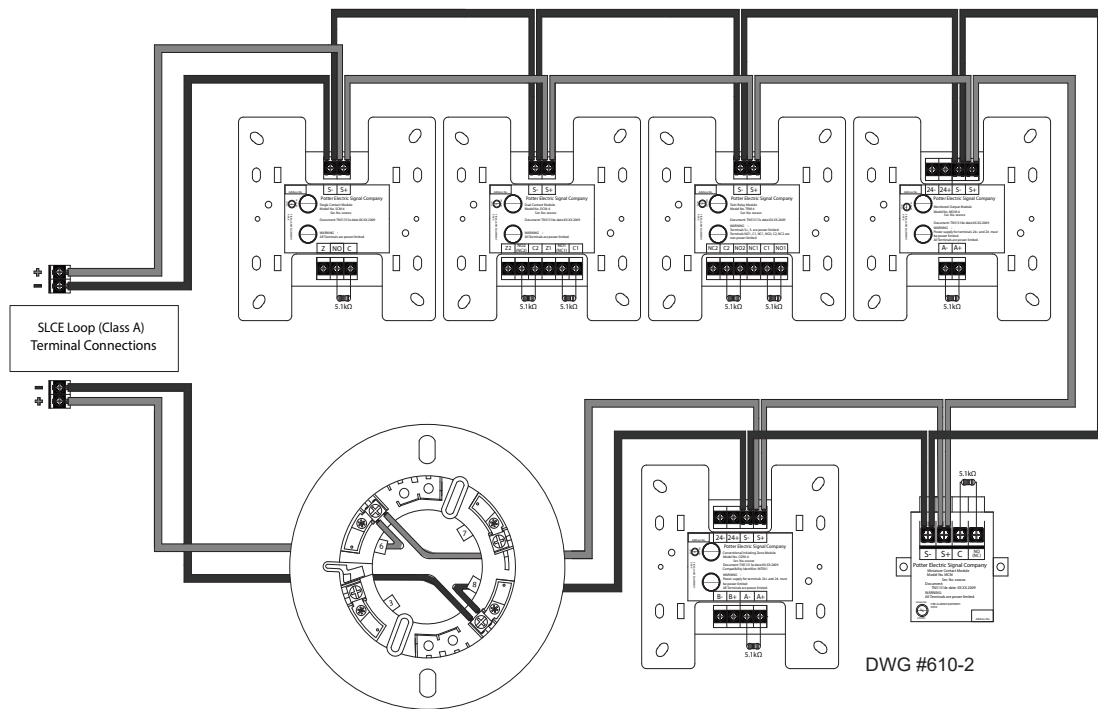


Figure 11. Nohmi Protocol Example of SLC Wired Class A

For Class B, installation of the CA-6500 is not required.

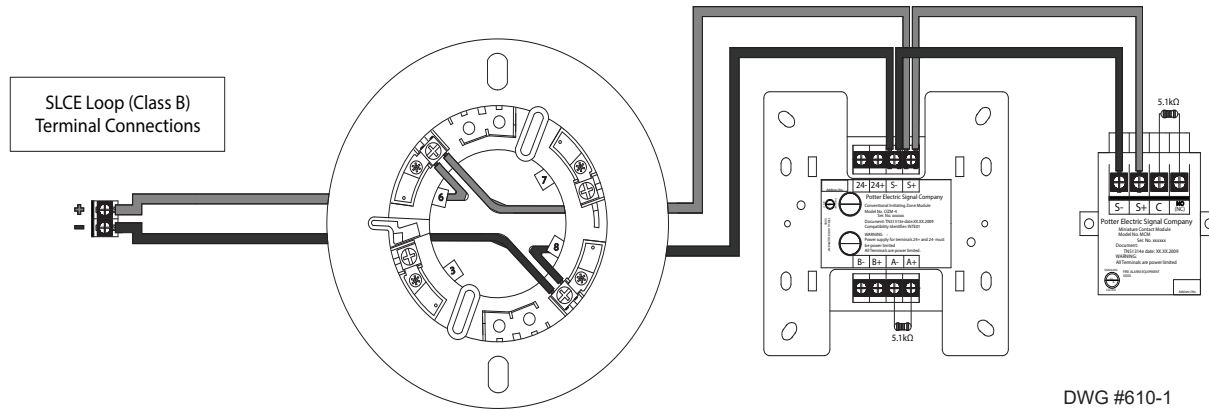


Figure 12. Nohmi Protocol Example of SLC as Class B

P-Link Expansion Bus Circuits

All expansion devices are supervised via the RS-485 connection. Wiring is fully supervised and power limited. Any connection to ground of 0 ohms will be annunciated as a ground fault.

P-Link Current = 1 Amp

P-Link Voltage = 20.0 VDC - 27.3 VDC

Maximum wire length = 6,500 feet.

Maximum wire resistance = Maximum wiring resistance is based on load.

Calculate using the following equation

$$(\text{Total P-Link Alarm Current}) \times (\text{Wire Resistance}) < 6 \text{ volts.}$$

The worst case P-Link current draw cannot exceed the 1 amp. P-Link wiring gauges and lengths are calculated using the worst-case current draw values from the table below. The worst case current draw numbers are used only for wiring calculations, refer to the battery calculation worksheet for normal standby and alarm currents.

| P-Link Accessory | Worst Case current draw (ma) |
|----------------------------|------------------------------|
| PAD100-SLCE (PAD Protocol) | 200 |
| SLCE-127 (Nohmi Protocol) | 200 |
| PSN-1000/PSN-1000(E) | 10 |
| RA-6075R | 25 |
| RA-6500R / RA-6500F | 25 |
| UD-1000/UD-2000 | 25 |
| LED-16/LED-16F | 25 |
| DRV-50 | 25 |
| RLY-5 | 35 |
| FIB-1000 | 30 |
| FCB-1000 | 25 |
| SPG-1000 | 40 |
| MC-1000 | 10 |
| IDC-6 | 20 |
| NCE-1000 | 50 |
| NCF-1000 | 95 |

| | |
|---|-----|
| SCA-2525 | 15 |
| SCA-2570 | 15 |
| SCA-5025 | 15 |
| SCA-5070 | 15 |
| SCA-10070 | 15 |
| SCA-5070INT (only install in AFC-1000V) | 50 |
| DCA-5025 | 15 |
| DCA-10025 | 15 |
| FFT-1000 | 15 |
| VM-1000 | 69 |
| LOC-1000 | 107 |

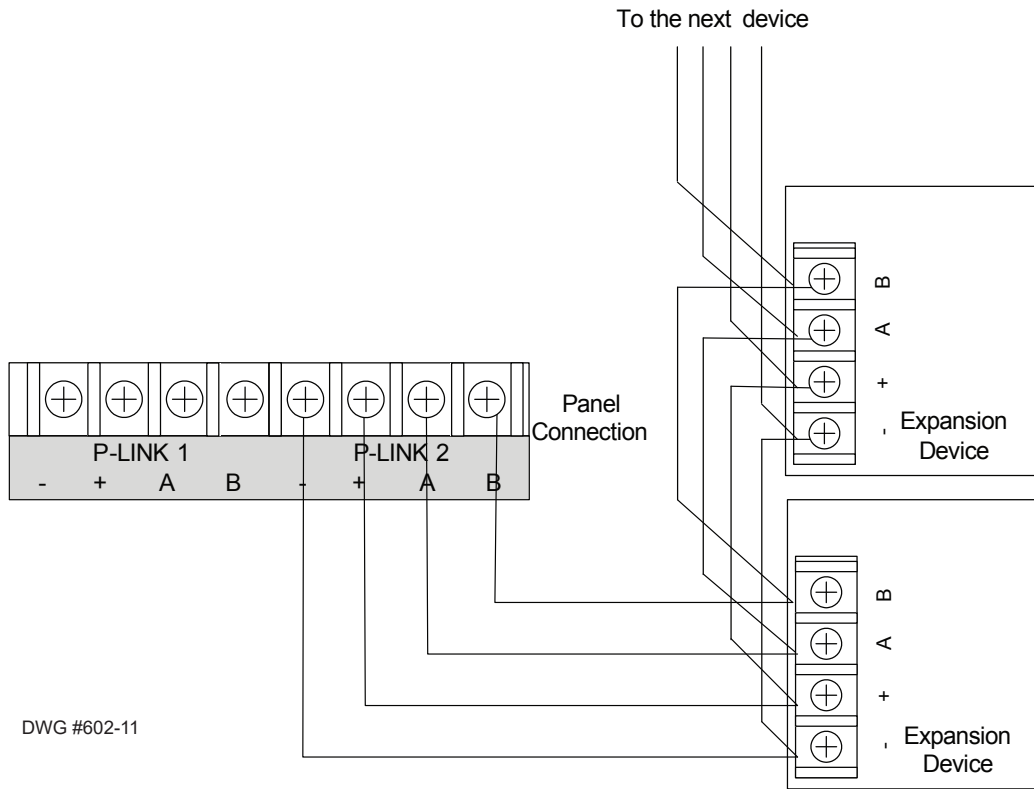


Figure 13. P-Link Class B Wiring Example

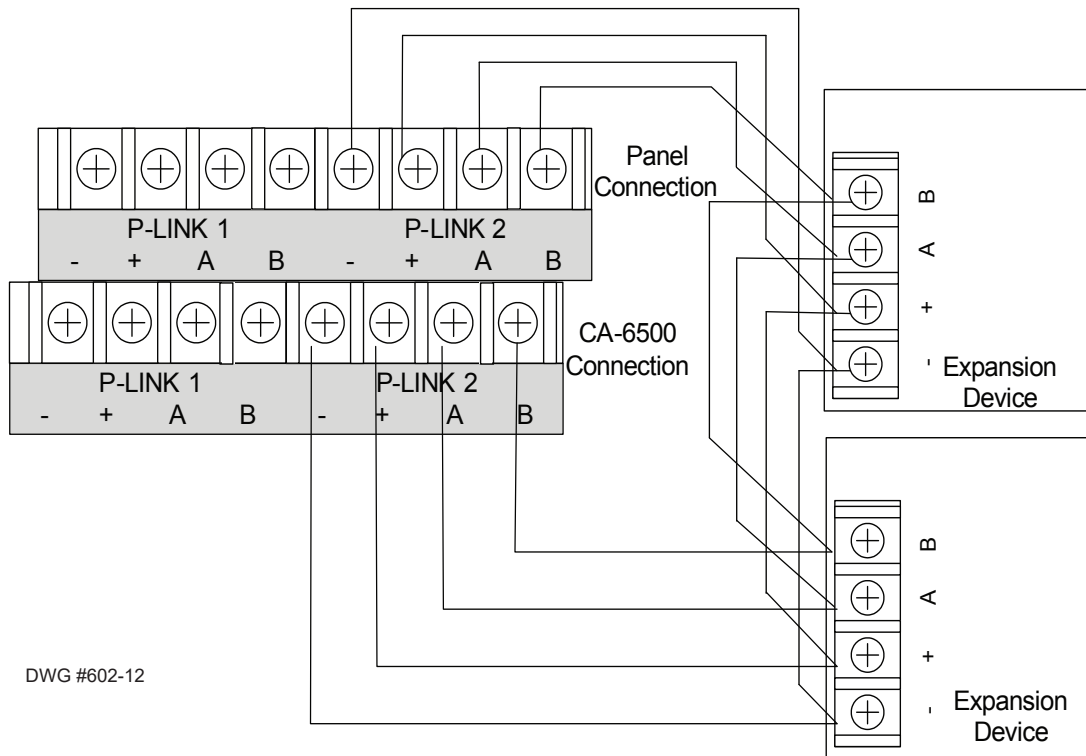


Figure 14. P-Link Class A Wiring Example Requires CA-6500

The panels can be programmed to support the following P-Link devices:

PAD100-SLCE/SLCE-127

The panels can be programmed to support up to 9 PAD100-SLCE (PAD protocol) and/or SLCE-127 (Nohmi protocol) loop expanders. The expansion card provides an additional SLC loop, supporting up to 127 addressable points. The expansion cards support both Class B and Class A wiring.

Remote Annunciator/Keypad Circuits (RA-6500R, RA-6500F, RA-6075R)

A maximum of 31 annunciators in any combination may be connected to the main fire control panel. The RA-6500R and RA-6500F provide a 4x40 character LCD display, along with standard function and numeric keys. The RA-6075R provides a 2x16 character LCD, along with standard function and numeric keys.

UD-1000/UD-2000

The panels can be programmed to support the UD-1000/UD-2000 digital alarm communicator transmitter (DACT). The DACT may be enabled, disabled or bypassed depending on the mode of operation. When the DACT is disabled, the panels are not capable of transmitting any alarms off premises through the DACT.

The DACT provides for up to two phone lines for communication to a monitoring station. The DACT communicates using the SIA-DCS or Ademco Contact ID protocols. When enabled, the DACT automatically monitors each phone line or voltage and has the ability to seize the line and connect with a remote receiver. Once the communication is complete, the DACT will hang up the phone line.

The UD-1000 is provided with an RJ-11 jack for each phone line. The UD-2000 is provided with terminal blocks for each phone line connection. In order for the DACT to work properly, it must be installed on a plain old telephone service (POTS) or equivalent as deemed by the authority having jurisdiction. The DACT must be installed before any other equipment to ensure it can seize the line and disconnect any other lines.

Phone lines are high voltage and should be run in a separate conduit from other circuits. The wire conductors connecting the DACT to the phone system should be 26 AWG or larger.

LED-16/LED-16F (LED Annunciator)

The panels can be programmed to support up to 31 LED-16s. Each LED-16/LED-16F can display alarm/supervisory/trouble conditions for up to 16 zones. Each LED is assigned to a zone, when that zone becomes active, the LED will illuminate. Five (5) non-programmable system LEDs are also provided, which annunciate the overall system condition (Power, Earth, Silenced, Alarm, Supervisory & Trouble).

DRV-50 (LED Driver)

The panels can be programmed to support up to 31 DRV-50 modules. The DRV-50 has 50 LED outputs that can be individually mapped to any zone. The DRV-50 also has four (4) programmable supervised dry contact inputs, and five (5) non-programmable system LED outputs, which annunciate the overall system condition (Power, Earth, Silenced, Alarm, Supervisory, & Troubles).

RLY-5 (Relay Board)

The panels can be programmed to support up to 31 RLY-5 modules. The RLY-5 provides 5 Form-C relay outputs which can be individually mapped to any zone. The Relays have a contact rating of 24VDC / 3.0A, 125VAC / 3A, and Power Factor of 1.0. These outputs are non-power limited and not supervised.

Note: If the power supply connected to the relays is power-limited, then the outputs are power limited.

FCB-1000 (Fire Communications Bridge)

The panels support one FCB-1000. The FCB-1000 provides a remotely-located IP connection into the panel. All IP reporting can be designated to pass through the FCB-1000 instead of through the on-board internet connection.

FIB-1000 (Fiber Interface Bridge)

The panels support up to 31 FIB-1000s. The FIB-1000 can be used to convert the standard 4 wire P-Link bus to/from fiber optic cable. The FIB-1000 uses multi-mode fiber, and is capable of Class A operation.

SPG-1000 (Serial/Parallel Gateway)

The panels support up to 31 SPG-1000 modules. The SPG-1000 can be used to drive a serial and/or parallel printer.

MC-1000 (Multi-Connect)

The panels support up to 31 MC-1000 modules. The MC-1000 allows multiple AFC series panels to report to the central station through a shared phone line or Internet connection.

PSN-1000/E (Power Supply Expander)

The panels can be programmed to support up to 31 PSN-1000/PSN-1000(E) Power Expanders. Each power expander provides 6 NAC circuits (3A max), and 2 dry contact input circuits. The PSN-1000/PSN-1000(E) reconditions/repeats the P-Link bus that provides additional distance and power.

IDC-6 (Initiating Device Circuit)

The panel supports up to 31 IDC-6 modules. Each IDC-6 provides 6 additional conventional Class B inputs or 3 Class A inputs.

NCE-1000 (Network Card Ethernet)

The panel supports up to 31 NCE-1000 and 200 per system. It is used to network the fire alarm panels using CAT5 Ethernet cable. It is fully supervised and is capable of Class B and Class A operation.

NCF-1000 (Network Card Fiber)

The panel supports up to 31 NCF-1000 and 200 per system. It is used to network the fire alarm panels using fiber optic cable. The NCF-1000 allows the user to install SFP (small form-factor pluggable) modules to utilize either single mode or multi-mode fiber. It is fully supervised and is capable of both Class B and Class A operation.

SCA-2525

The panels support up to 10 SCA-2525 single channel amplifiers. The SCA-2525 is a 25W single channel amplifier that distributes live voice and ECS across 8 Class A or 8 Class B speaker outputs. The SCA-2525 provides a 25VRMS output voltage.

SCA-2570

The panels support up to 10 SCA-2570 single channel amplifiers. The SCA-2570 is a 25W single channel amplifier that distributes live voice and ECS across 8 Class A or 8 Class B speaker outputs. The SCA-2570 output voltage is selectable for 25VRMS or 70VRMS.

SCA-5025

The panels support up to 10 SCA-5025 single channel amplifiers. The SCA-5025 is a 50W single channel amplifier that distributes live voice and ECS across 8 Class A or 8 Class B speaker outputs. The SCA-5025 provides a 25VRMS output voltage.

SCA-5070

The panels support up to 10 SCA-5070 single channel amplifiers. The SCA-5070 is a 50W single channel amplifier that distributes live voice and ECS across 8 Class A or 8 Class B speaker outputs. The SCA-5070 output voltage is selectable for 25VRMS or 70VRMS

SCA-10070

The panels support up to 10 SCA-10070 single channel amplifiers. The SCA-10070 is a 100W single channel amplifier that distributes live voice and ECS across 8 Class A or 8 Class B speaker outputs. The SCA-10070 output voltage is selectable for 25VRMS or 70VRMS

SCA-50INT

The panel supports up to 31 SCA-50INT integrated single channel amplifiers. The SCA-50INT is a small form 50W single channel amplifier that distributes live voice and ECS across 4 Class A or 4 Class B speaker outputs. The SCA-50INT output voltage is selectable for 25VRMS or 70VRMS. The amplifier is equipped with a mounting bracket and may be installed in the AFC-1000V, LOC-1000 and PSN-1000E.

DCA-5025

The panels support up to 10 DCA-5025 dual channel amplifiers. The DCA-5025 is a 50W dual channel amplifier that distributes live voice and ECS across 8 Class A or 8 Class B speaker outputs. The DCA-5025 provides a 25VRMS output voltage. The DCA-5025 is compatible for backup amplification by adding a BUA-1000. The DCA-5025 is also provides the flexibility to extend the output voltage to 70VRMS by adding a 70V-1000.

DCA-10025

The panels support up to 10 DCA-10025 dual channel amplifiers. The DCA-10025 is a 100W dual channel amplifier that distributes live voice and ECS across 8 Class A or 8 Class B speaker outputs. The DCA-10025 provides a 25VRMS output voltage. The DCA-10025 is compatible for backup amplification by adding a BUA-1000. The DCA-10025 is also provides the flexibility to extend the output voltage to 70VRMS by adding a 70V-1000.

LOC-1000

The panel supports up to 31 LOC-1000 local operator consoles. The LOC-1000 is a local operator console which is utilized to locally control the system, generate live voice and ECS. It also provides common indication of Alarms, Supervisory, Trouble and other system status and control functions.

FFT-1000

The panel supports 1 FFT-1000 Fire Fighter Telephone panel. The FFT-1000 is Fire Fighter Telephone panel that provides the ability to establish 2-way phone communication between the main FFT-1000 and the remote fireman's handsets. The panel is equipped with 24 Class B or 12 Class A phone circuits and can be expanded up to 96 Class B or Class A phone circuits by adding the FFT-EXP phone circuit expansion module.

V-Link Bus

The V-Link is a supervised proprietary bus that transmits audio to designated channels on SCA and DCA amplifiers. Wiring is fully supervised, and power limited. Any connection to ground of 0 ohms will be annunciated as a ground fault.

Wire Impedance = 50 ohms

Releasing Device Circuit

The releasing circuit is fully supervised and power limited. The releasing device circuit is a NAC that is programmed to control a releasing device such as a solenoid or squib.

When the control panel is programmed for releasing, additional features are allowed specific to releasing. A PAD100-NAC (NAC) notification appliance circuit may be connected to a releasing device as well and operate as a releasing circuit. When the NAC is used for releasing, it must have a regulated power supply that has a battery back-up equal to that of the panel or greater.

The output is a constant 24 VDC, regulated output. When connected to a releasing device, the circuit is a special application circuit and listed with the devices as outlined in Section 6 of this document.

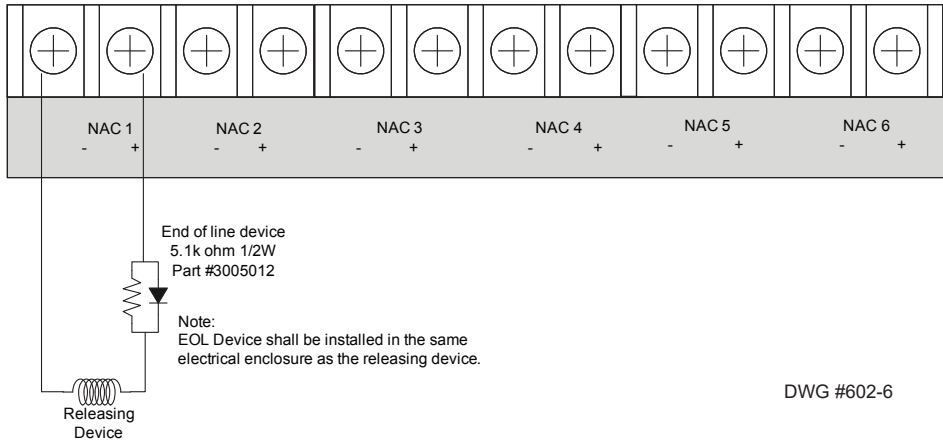


Figure 15. NAC Releasing Circuit Wiring with EOLD Assembly

The maximum current is 3 amps. The maximum line impedance is calculated using the following formula.

$$R_{max} \text{ (ohm)} = (24V - V_{min} - 0.95V) / I_{total}$$

V_{min} is the lowest voltage operation of the connected devices.


I_{total} is the total current of the connected devices.

When a NAC is used as a releasing circuit, the End of Line Diode (EOLD) assembly must be installed. The EOLD is Potter part number 3005012 and must be installed in accordance with the installation manual.

According to UL 10th Edition, the disabling of a releasing circuit shall be accomplished by a physical switch activated without the use of the software. When a releasing circuit is disabled a supervisory signal will be annunciated at the FACP.

Municipal Box Connection

When programmed as a municipal box connection, the circuit power is a limited Class B circuit, and is supervised for opens and ground fault circuit connections. This setup also provides a local energy connection.

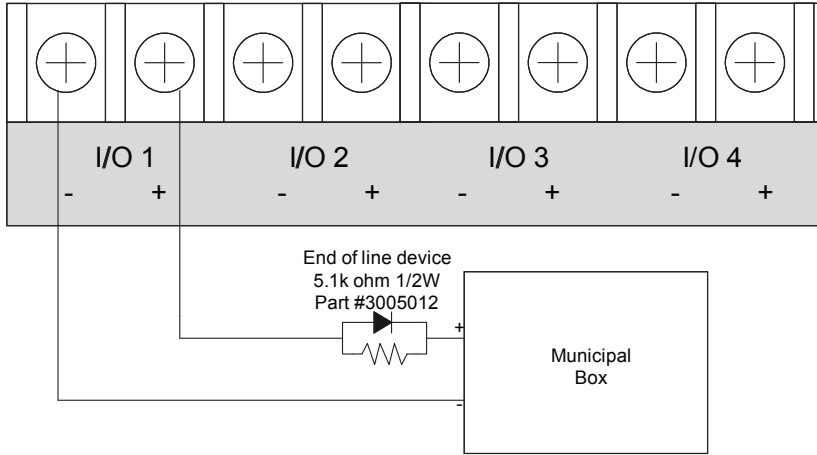

Notes:
 IO circuits and/or NAC Circuits can be used as Municipal box connection
 The EOL device shall be installed in the same electrical enclosure as the Municipal Box

DWG #602-9

Figure 16. Municipal Box Wiring Example


Trip current = NAC1-NAC6 = 3 Amps, I/O1-I/O4 = 1 Amp

Max Voltage = 24 VDC

Max trip Coil Impedance = 13.7 ohms

The panel has ground fault detection on municipal box connection circuits. The impedance to ground for ground fault detection is 0 ohms.

Reverse Polarity Communication Line Circuit

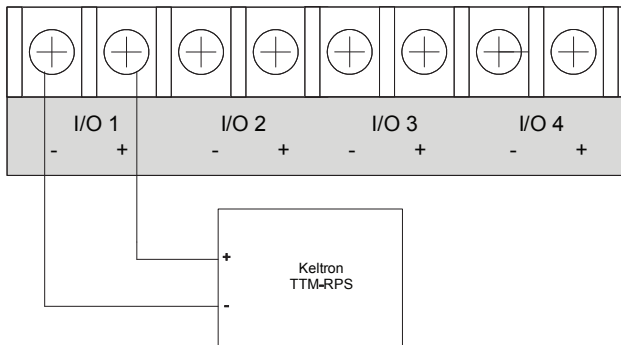

Note: IO circuit must be configured as a Reverse Polarity circuit
 This connection is limited to same room installation. This connection shall be limited to 20 feet and enclosed in conduit or equivalently protected against mechanical injury.

DWG #602-8

Figure 17. Example of Reverse Polarity I/O Circuit Wiring


Only the I/O circuits on the panel can be programmed as reverse polarity circuits. The short circuit current is rated at 24 VDC and 14 mA maximum.

When configured for reverse polarity, the panel will indicate alarm and trouble events to a remote site. Alarms will override trouble conditions.

The panels have ground fault detection on reverse polarity circuits. The impedance to ground for ground fault detection is 0 ohms.

The connection between the FACP and the remote device shall be limited to 20 feet and enclosed in conduit or equivalently protected against mechanical injury.

Relay Outputs

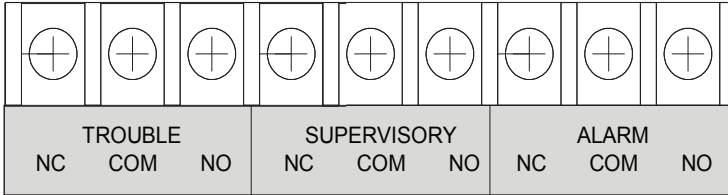

DWG #593-26

Figure 18. Panel's Dedicated Relay Outputs

The panels have three dedicated common relays. The dedicated trouble relay is a failsafe trouble relay that changes position anytime a trouble condition occurs.

The contact rating is 24VDC / 3.0A, 125VAC / 3A, Power Factor: 1.0. These outputs are non-power limited and not supervised. However, they are power-limited if the power supply to the connected devices is power-limited.

General Wiring Information

The cabinet has various conduit knockouts located around the cabinet for ease of wire installation. In addition, this method provides a means to separate different types of circuit to reduce electrical interference, transient voltage or voltage ratings.

The enclosure requires the use of power limited and non-power limited wiring on the main board as well as within the enclosure. Power limited wiring is to remain separated from non-power limited by a minimum of 0.25 inches and all cabling should be insulated to the higher voltage.

When the panel is installed, the National Electrical Code (NEC, NFPA 70) should be followed for the proper installation and separation of power limited and non-power limited circuits. The mixing of power limited and non-power limited should be avoided. Refer to the following figure for suggested wiring routing.

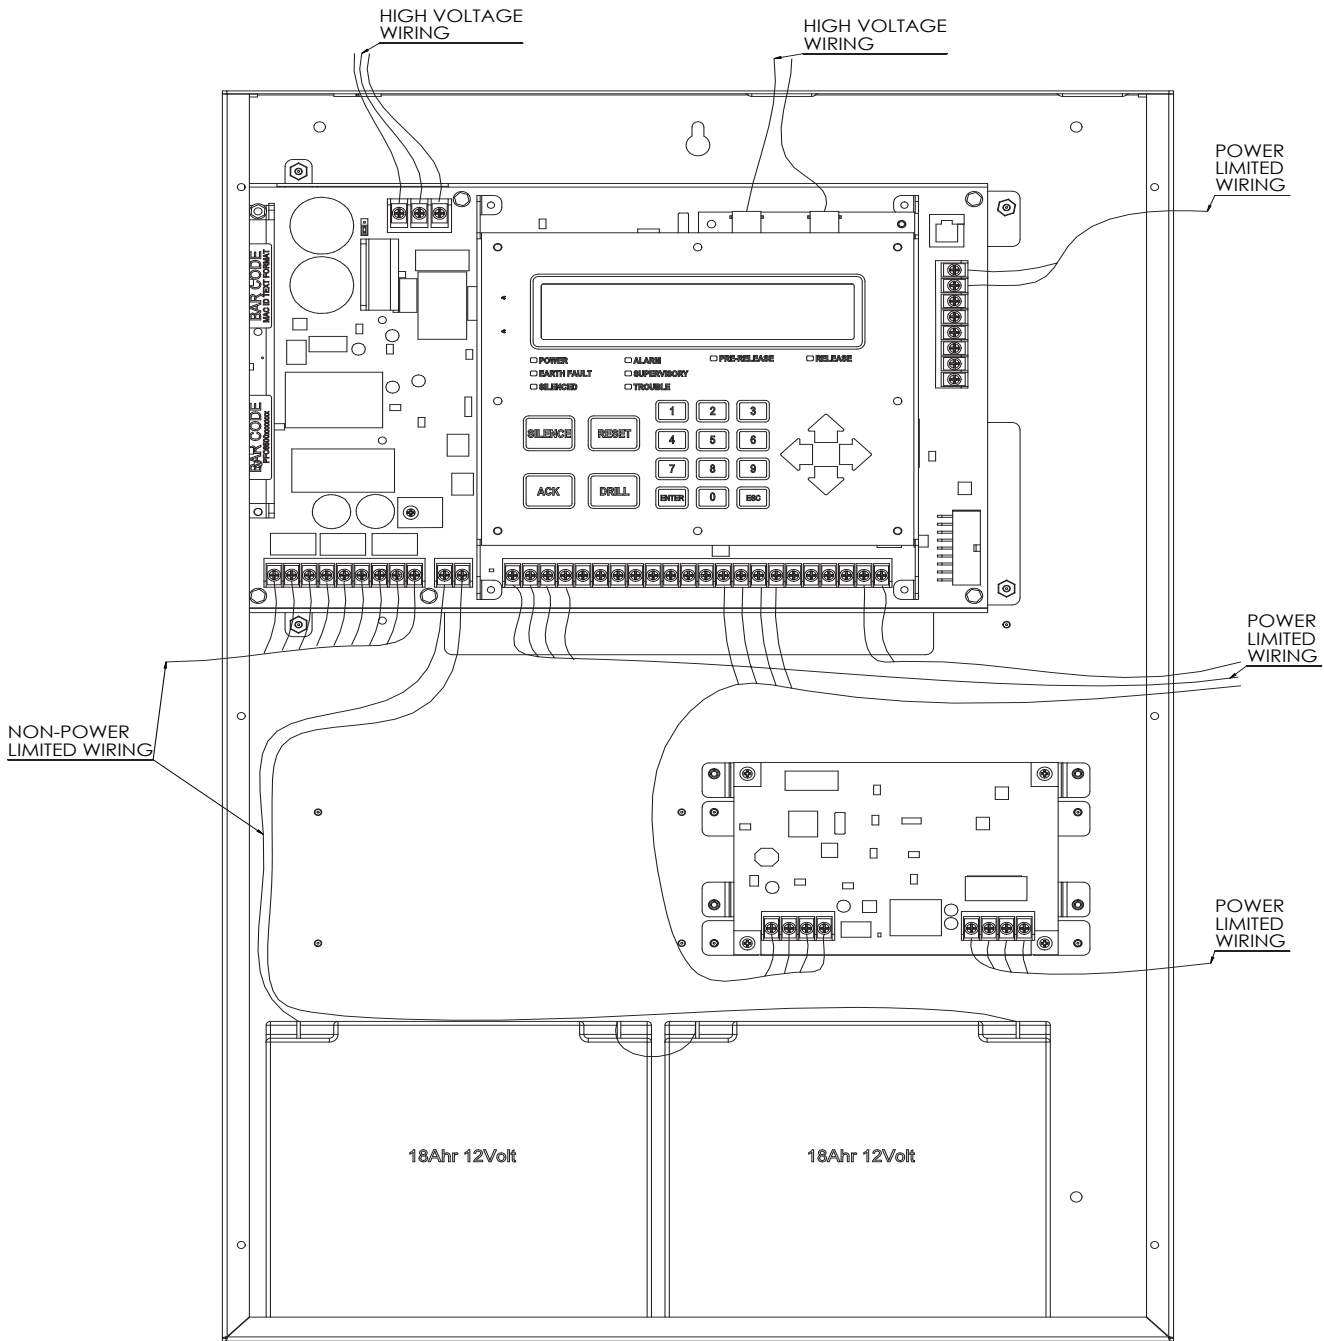


Figure 19. Example of Panel's Wire Routing

DWG #641-5

2. Operation

| | |
|-----------------|--|
| System Type: | Auxiliary Central Station (Protected Premises Unit) Proprietary (Protected Premises Unit) Remote Station (Protected Premises Unit) Local |
| System Service: | Automatic Fire Alarm Manual Fire Alarm Sprinkler Supervisory Waterflow Alarm Releasing Service for Pre-Action, Deluge |
| System Signal: | Radio Frequency Digital Alarm Communicator (DAC) March Time Non-Coded Reverse Polarity Other Technologies |

3. Functionality

The panel utilizes a signaling line circuit for communication to various sensors and modules. The system polls each loop between every 4 to 5 seconds. The system is completely supervised and is designed to comply with UL 864. The control panel uses a proprietary protocol to digitally communicate with various sensors and modules to determine the status of each. When the panel response from the sensor or module is within a pre-determined range or status, the control will process the commands accordingly.

The control panel user interface requires the use of a key to open the outer door. Advanced features will require an additional user code to be entered using a combination of numbers.

The panel is completely programmable through the use of a computer program. Remote programming is detailed later in this section.

The control panel includes three relay contacts for additional monitoring or building functions.

The first relay is a failsafe, dedicated Trouble Relay. This relay changes state during any trouble condition. This relay is not programmable and no additional mapping to this relay can take place.

The second relay is a dedicated Supervisory Relay. This relay changes state during any supervisory condition. This relay is not programmable and no additional mapping to this relay can take place.

The third relay is a dedicated Alarm Relay. This relay changes state during any alarm condition. This relay is not programmable and no additional mapping to this relay can take place.

The AFC-1000 has six NACs and four I/O circuits. Each NAC is rated for 3 amps at 24 VDC. Each I/O circuit is configurable as a NAC rated for 1 amp at 24 VDC, or as a dry contact input. The NACs may be operated in Class A with the addition of a CA-6500 Class A Expander.

NACs may be programmed to provide steady (constant) voltage, a cadence pattern, releasing service or synchronized strobes. Full synchronization is maintained system-wide. The NACs may be programmed as silenceable or non-silenceable. Anytime a NAC has been silenced, the condition will be indicated by the silenced LED. If a NAC that is programmed as silenceable is silenced and another alarm event mapped to that NAC occurs, the NAC will resound and the silenced LED will extinguish.

The Low AC report delay period is programmable from 30 minutes up to 30 hours. For UL installations and applications the installer must set the time delay between 30 minutes and 90 minutes.

Supervisory Signal Operation – Zones programmed as supervisory zones can be programmed as latching or non-latching.

Trouble Signal Operation – Any fault or off normal that would impair the system is annunciated as a trouble condition. The trouble condition is specifically displayed on the LCD display so the trouble can be corrected. When a trouble occurs the buzzer sounds every ten seconds for one second, the trouble LED illuminates and the trouble relay changes state.

The panel transfers from AC to battery instantly upon AC failure or brownout. The trouble relay will indicate the low AC condition after the Low AC Report Delay has elapsed.

The control panel can utilize an optional digital alarm communicator transmitter, (UD-1000/UD-2000). The UD-1000/UD-2000 is a two line dialer with the capability to report in the Ademco Contact ID or the Security Industry Association's Digital Communications Standard (SIA-DCS).

When equipped with a UD-1000, the status changes of the panel are remotely communicated to a monitoring station. Programming options allow for selecting separate accounts for alarm/trouble/supervisory/test events. When a UD-1000/UD-2000 is not installed, the panel will operate as a local system.

The DACT will provide a daily test to a remote monitoring point daily. The daily test time is programmable. If two phone lines are utilized, the DACT will alternate between lines on each daily call. If multiple accounts are programmed, then multiple daily tests will be conducted alternating on each line.

The panels may be equipped with 31 PSN-1000 series intelligent power expanders. The PSN-1000/PSN-1000(E) is a 10 amp notification power supply and P-Link (RS-485) repeater. The power supply connects to the P-Link bus from the control panel and is operated and supervised from the panel.

The power supply has six (6) Class B or three (3) Class A power outputs. Each output is regulated and power limited with a 3 Amp maximum rating. In addition, the PSN-1000s have two (2) programmable dry contact inputs. The dry contact inputs are Class B, supervised inputs.

The power supply operates on either 120 or 220 VAC power and has a regulated 24 VDC output. In addition, the panel can charge up to 55 AH batteries and will house 18 AH batteries.

The power supplies are programmed and controlled through the main control panel P-Link bus. The panel displays any troubles or off normal conditions of the power supply and the events are stored in the panel history buffer.

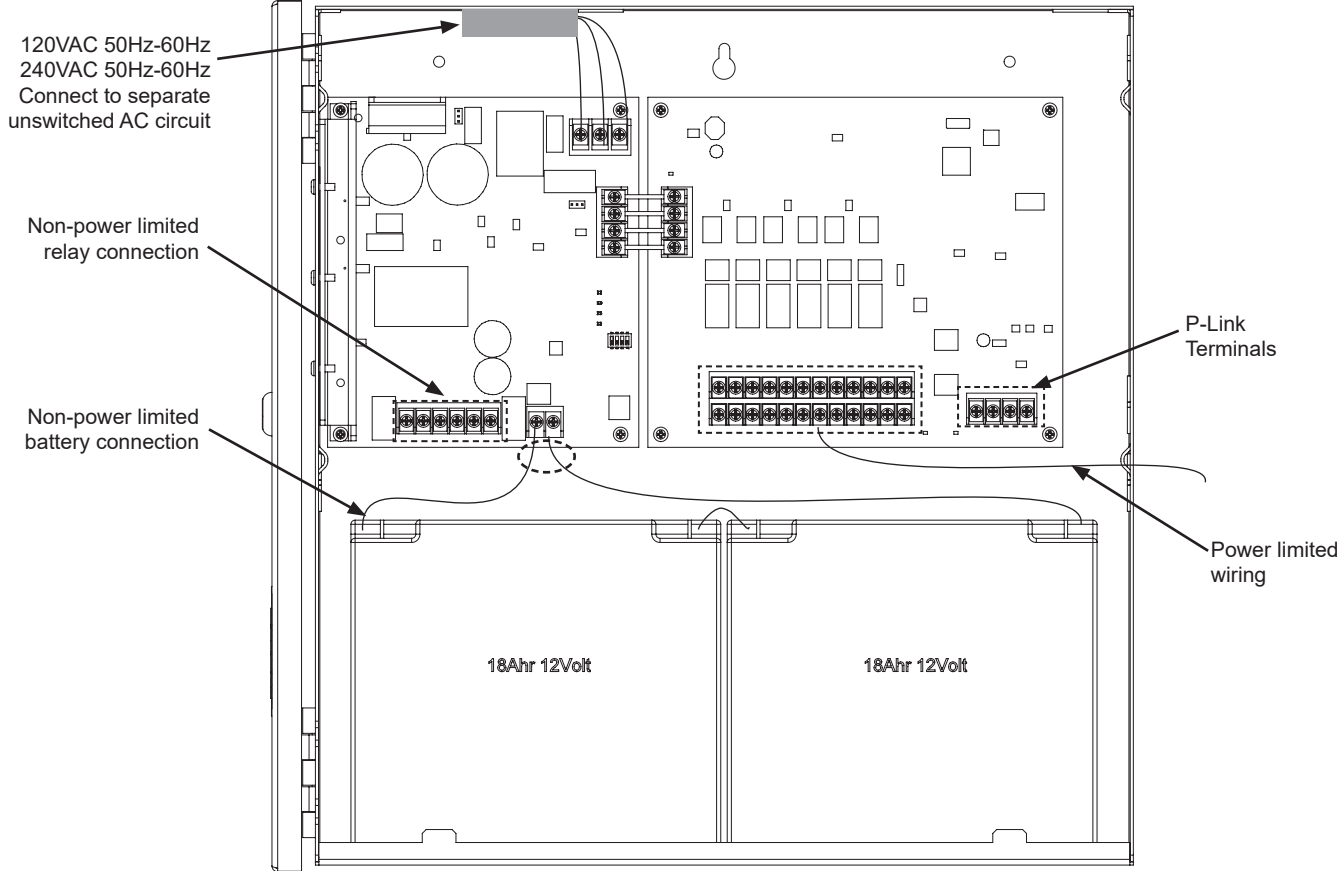


Figure 20. PSN-1000 Wiring Example

DWG #608-23

The panels may be equipped with 9 additional PAD100-SLCE (PAD Protocol) and/or Nohmi Protocol SLCE-127 boards that utilize a signaling line circuit for communication to various sensors and modules. The system polls each loop between every 4–5 seconds. The PAD100-SLCE and the SLCE-127 supports a maximum of 127 addressable devices configured in any combination of smoke sensors, heat detectors, input modules or output modules.

The PAD100-SLCE and the SLCE-127 outputs are supervised and regulated. Circuits are low voltage and power limited. All wiring must be separated by at least 0.25 inches and the wire insulation must be for the higher voltage. Refer to Figure 19 for suggested wire routing.

The PAD100-SLCE and the SLCE-127 are supplied with a mounting bracket which allows it to be mounted into a compatible fire enclosure. Please refer to the figures shown below:

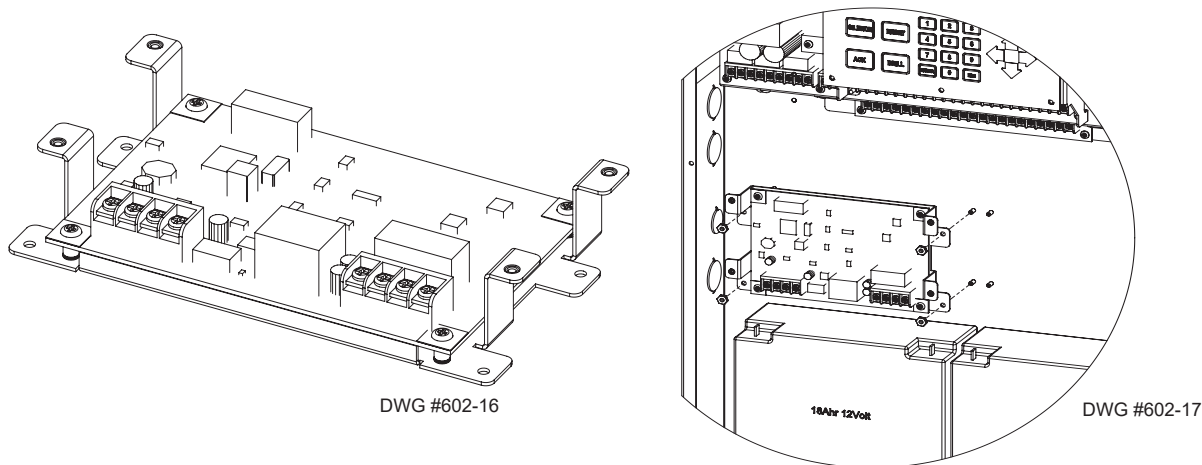


Figure 21. PAD100-SLCE / Nohmi Protocol SLCE-127 Board & Shown Installed in AFC-1000 Cabinet

When the panels are equipped with a LED-16/LED-16(F) module, alarm/supervisory/trouble conditions display for up to 16 zones. Blank zone labels are provided for use with the LED-16s. Zone names/identifiers can be typed or written on the supplied card-stock, and then inserted into the LED-16/LED-16F as shown below.

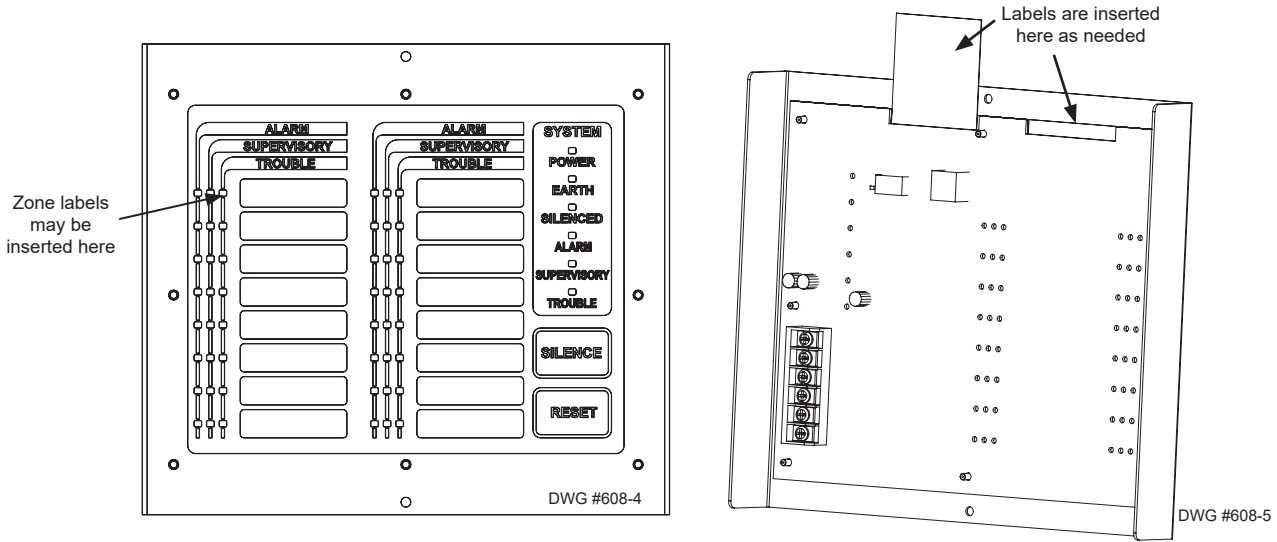


Figure 22. LED-16/LED-16(F) Module & Board

The LED-16s are controlled over the 4-wire P-Link connection. The higher current required for the LED outputs can be provided by the panel, or from an auxiliary power source as shown below. The auxiliary power can be any fire listed 24VDC source, and is fully supervised.

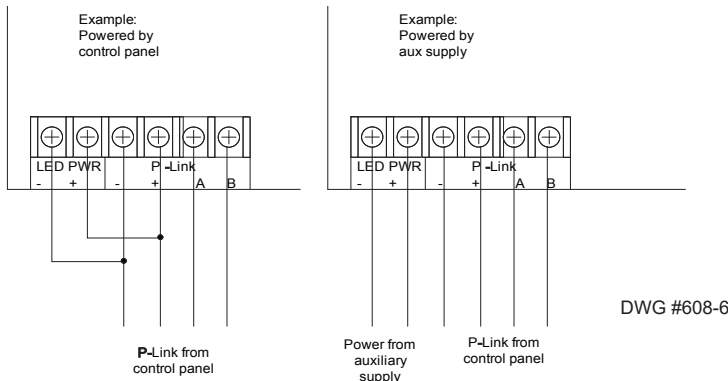


Figure 23. Examples of Wiring a LED-16/LED-16(F) Module to Control Panel or Auxiliary Power Supply

The panels may be equipped with a DRV-50 (LED Driver) module, which can be individually mapped to any zone. The DRV-50 is controlled over the 4-wire P-Link connection. The DRV-50 mounts in a mounting bracket as shown below. This can then be mounted into any of the compatible fire enclosures, or the AE-2, AE-8 or AE-14 accessory cabinets.

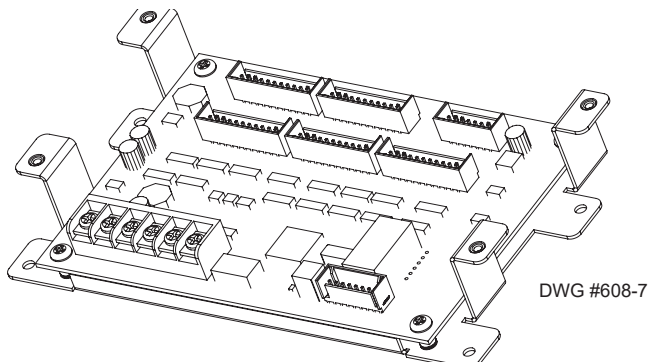


Figure 24. DRV-50 Board Showing Mounting Bracket

The 50 programmable LED outputs are located on connectors P1-P5, each containing 10 LED outputs and two 5VDC outputs. The system LEDs & PZT control outputs are located on connector P6. LEDs are wired as shown below, no external resistor is required. All outputs are power limited. All connections to P1-P6 are limited to same room installation.

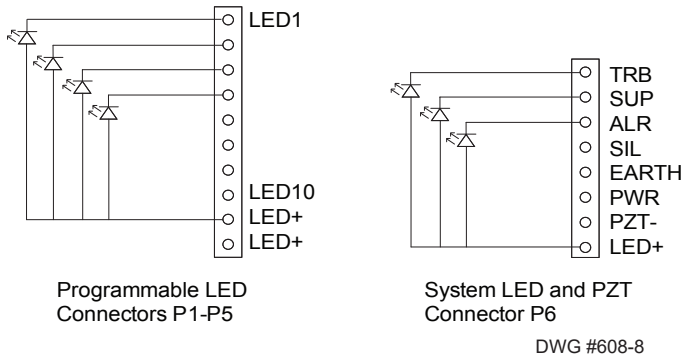


Figure 25. DRV-50 "P1-P5" and "P6" Connectors

The 4 programmable dry-contact inputs are located on connector P7. All input circuits are power limited and use UL listed 5.1k EOL resistor (Potter part #3005013). The inputs can be programmed for any of the contact input functions available for other input circuits available on the panel. Inputs I1-I4 are Class B dry contact inputs only. All contact inputs are fully supervised. Ground fault detection impedance is 0 ohms.

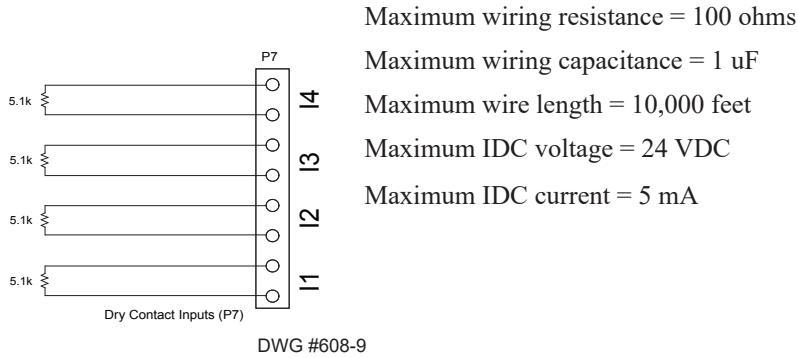


Figure 26. DRV-50 Dry Contact Input "P7" Connector

The higher current required for the DRV-50 outputs can be provided by the panel, or from an auxiliary power source as shown below. The auxiliary power can be any fire listed 24VDC source, and is fully supervised. Output power must be 16 VDC-33 VDC, and must be power limited.

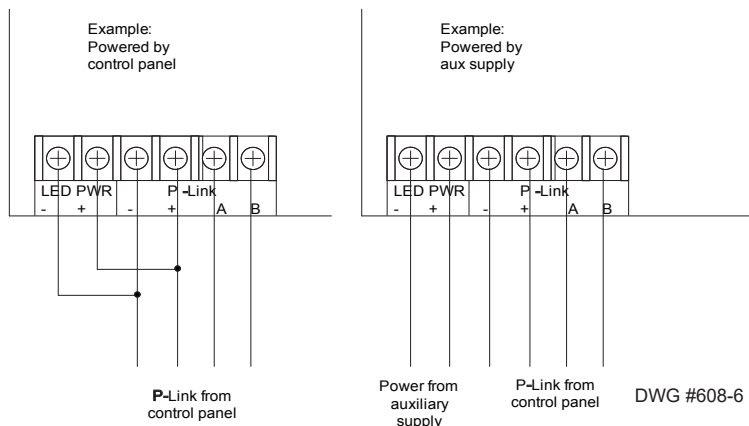


Figure 27. Examples of Wiring DRV-50 from Control Panel or Auxiliary Power Supply

The panels may be equipped with a RLY-5 (Relay Board) module, which is controlled over the 4-wire P-Link connection. The RLY-5 mounts in a mounting bracket as shown below. The RLY-5 can be mounted inside the panel cabinet, or the AE-2, AE-8 or AE-14 accessory cabinets.

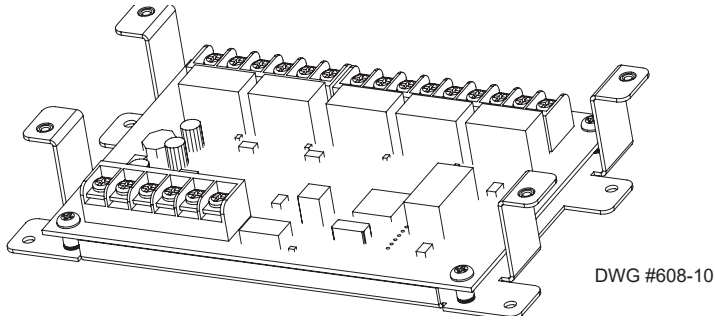


Figure 28. RLY-5 Board Showing Mounting Bracket

The RLY-5 higher current required for the relay outputs can be provided by the panel, or from an auxiliary power source as shown below. The auxiliary power can be any fire listed 24VDC source, and is fully supervised. Output power must be 16VDC-33VDC, and must be power limited.

- Relay contacts are rated for 120VAC/24VDC, 3 Amp (resistive).
- All connections to relay contacts shall be power limited.
- Not to be used for off-premise signaling.

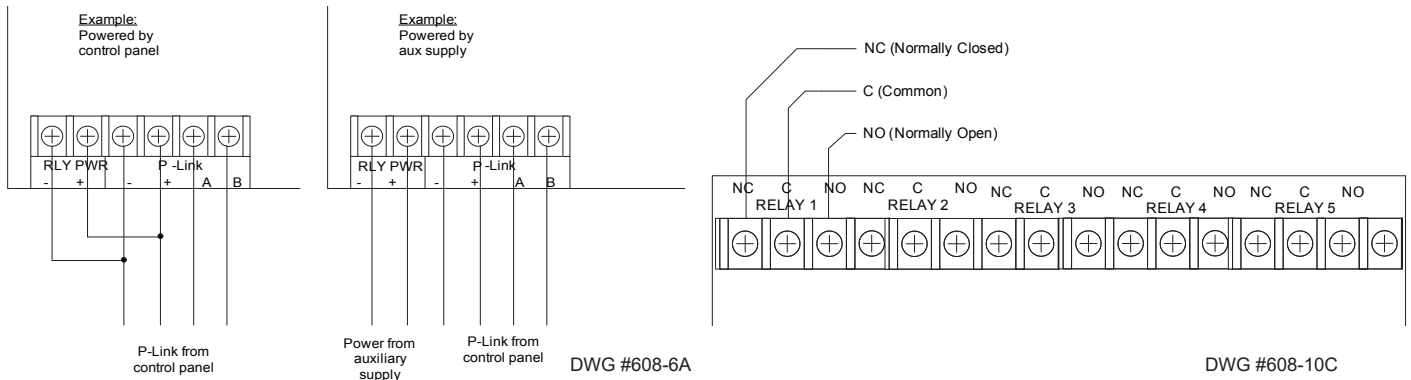


Figure 29. RLY-5 Wiring to Control Panel / Auxiliary Power Supply & RLY-5 Normally Open / Normally Closed Contacts

When the FCB-1000 (Fire Communications Bridge) is added to the panel, a remotely-located IP connection is provided into the panel. The FCB-1000 can be mounted inside the AE-2, AE-8 or AE-14 accessory enclosure. The optional rack-mount kit (FCB-1000RM) includes a standard 19 inch rack-mount enclosure, which can then be installed directly in an equipment rack.

Note: The Ethernet/IP connection is limited to same room installation. This connection shall be limited to 20 feet, and enclosed in conduit or equivalently protected against mechanical injury.

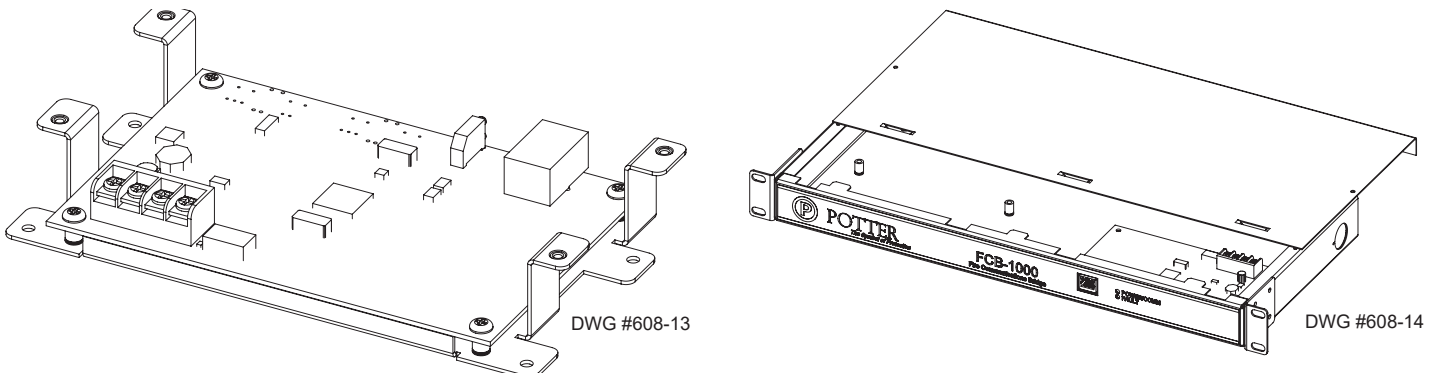


Figure 30. FCB-1000 Bridge & FCB-1000RM Showing Rack Mount

When the panels are equipped with the FIB-1000 (Fiber Interface Bridge) optional board, the standard 4 wire P-Link bus may be converted to/from the fiber optic cable.

The FIB-1000 can be mounted inside the AE-2, AE-8 or AE-14 accessory enclosure. The optional rack-mount kit (FIB-1000RM) includes a standard 19 inch rack-mount enclosure, which can then be installed directly in an equipment rack.

- Utilizes multimode 62.5/125 micron fiber optic cable (wave length = 820 nm)
- Tolerates up to 12 db of signal loss

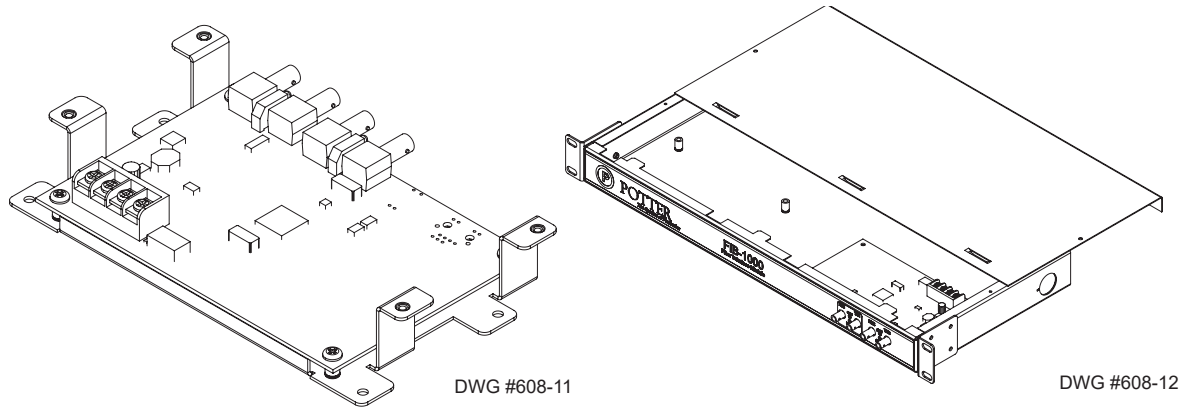


Figure 31. FIB-1000 Bridge & FIB-1000RM Showing Rack Mount

An optional SPG-1000 serial/parallel gateway (printer driver) board can be mounted inside the AE-2, AE-8 or AE-14 accessory enclosure. A rack-mount kit (SPG-1000RM) includes a standard 19 inch rack-mount enclosure, which can then be installed directly in an equipment rack.

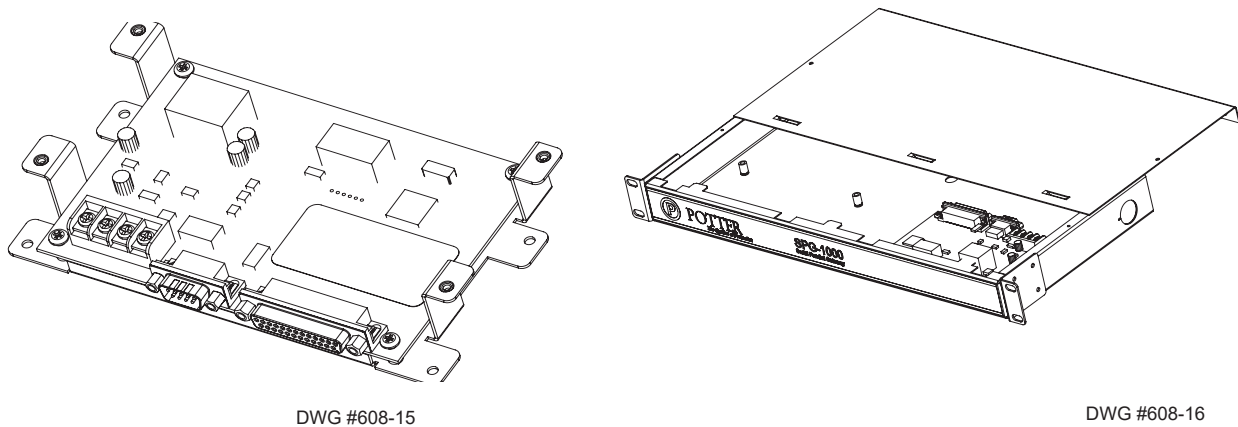


Figure 32. SPG-1000 Serial Parallel Gateway Board & Rack Mount

Note: Serial/Parallel printer connection is limited to same room installation. This connection shall be limited to 20 feet, and enclosed in conduit or equivalently protected against mechanical injury.

When the AFC series panels are equipped with the MC-1000 (Multi-Connect Module) optional board, up to 63 panels may be interconnected to report to the central station through a shared phone line or Internet connection.

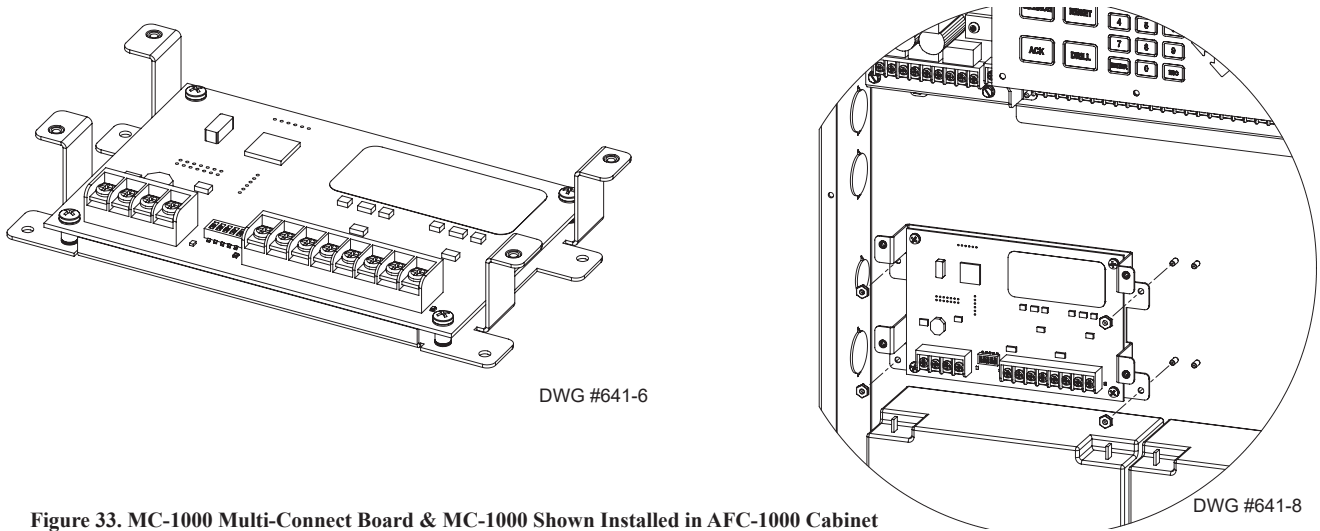


Figure 33. MC-1000 Multi-Connect Board & MC-1000 Shown Installed in AFC-1000 Cabinet

The panel supports up to thirty one (31) IDC-6 modules. The IDC-6 is controlled over the 4 wire P-Link connection. It can be mounted in the large panel enclosure, the PSN-1000, or either of the AE-2, AE-8 or AE-14 accessory cabinets.

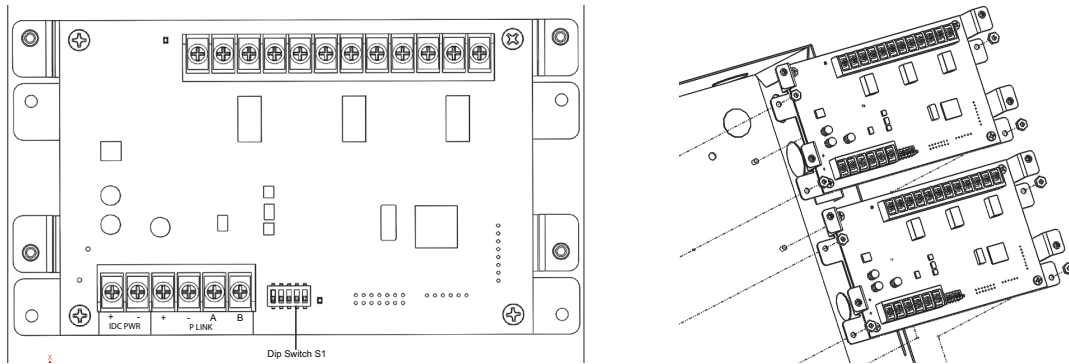


Figure 34. IDC-6 Initiating Device Circuit Expander and IDC-6 Installation

The IDC-6 higher current required for the inputs can be provided by the panel, or from an auxiliary power source as shown below. The auxiliary power can be any fire listed 24VDC source, and is fully supervised. IDC-6 operating voltage range is 15VDC-28VDC, and must be power limited.

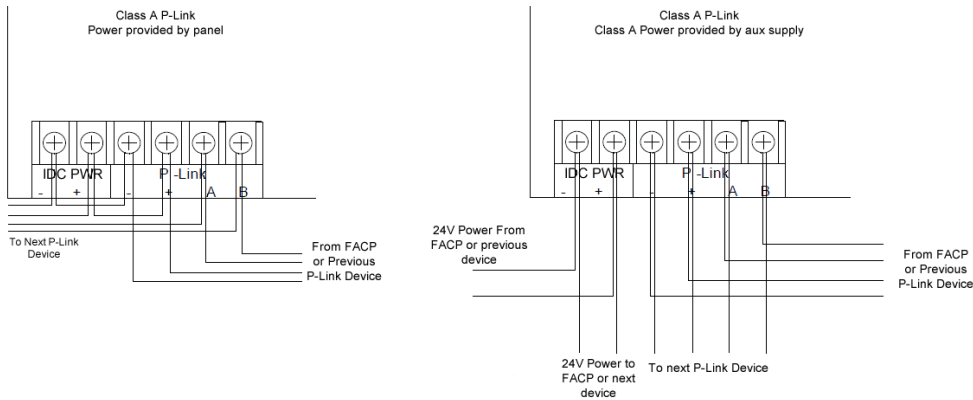


Figure 35. IDC-6 Class A Wiring

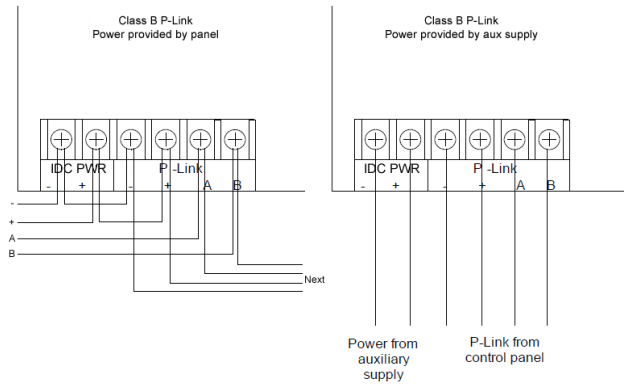


Figure 36. IDC-6 Class B Wiring

The NCE-1000 is used to network the fire alarm control panels via CAT5 Ethernet cable. It is fully supervised and is capable for Class B and Class A operation. The NCE-1000 can be used as a Class A extender which extends the length of the Ethernet connection from 300 feet to 600 feet. The NCE-1000 may be mounted in either the control panel cabinet, the PSN- 1000/E, the AE-2, AE-8 or AE-14. When wiring Class A or B, the connection between the FACP and the module shall be limited to 20 feet and enclosed in conduit or equivalently protected against mechanical injury. A maximum of 31 NCE-1000s can be installed per panel, with a maximum of 200 panels per network. Please refer to installation manual 5406326.

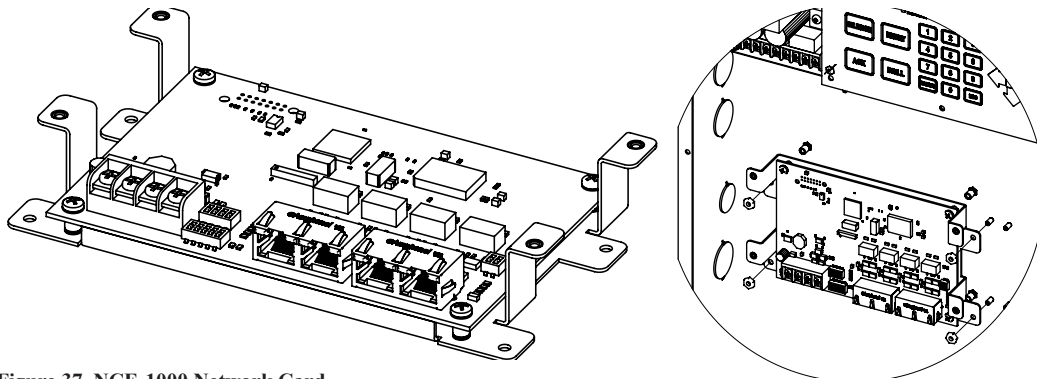


Figure 37. NCE-1000 Network Card

The NCF-1000 is used to network the fire alarm control panels using fiber optic cable. The NCF-1000 allows the user to install SFP (small form-factor pluggable) modules to utilize either single mode or multi-mode fiber. It is fully supervised and is capable of both Class B and Class A operation. The NCF-1000 may be mounted in either the control panel cabinet, the PSN-1000/E, the AE-2, AE-8 or AE-14. The connection between the FACP and the module shall be limited to 20 feet and enclosed in conduit or equivalently protected against mechanical injury. A maximum of 31 NCF-1000s can be installed per panel with a maximum of 200 panels per network. Please refer to installation manual 5406424.

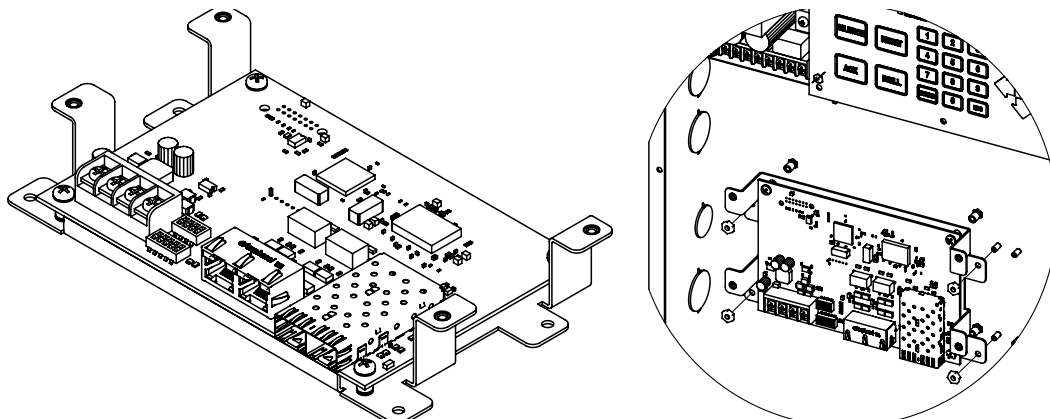


Figure 38. NCF-1000 Network Card Fiber

The control panel has an interface display for allowing users, technicians and installers the ability to recognize the status and input changes to the control panel. The display consists of three parts — the 160 character LCD display, the keypad and LEDs.

The keypad on the control panel is utilized for common user functions and system programming. The common user function buttons the following:

ACK – When pressed acknowledges the status change of the panel.

Signal Silence – When the button is pressed will silence outputs that are programmed as silenceable.

System Reset – When this button is pressed, the system will reset the panel to a normal condition. Once the reset is complete, any off normal status will be displayed.

Fire Drill – When programmed, the Fire Drill button will activate the programmed outputs to simulate an actual alarm without creating an alarm event.

The display has the following LEDs:

Power – A green LED that illuminates any time AC power is present.

Alarm – A red LED that flashes any time an input programmed as an alarm device is active and has not been acknowledged. The LED will illuminate steady after all alarm conditions have been acknowledged.

Pre-Release – An amber LED that illuminates when a releasing zone is in a Pre-Discharge mode.

Release – A red LED that is on steady when a releasing output is active.

Earth Fault – An amber LED that flashes any time a ground fault is present on one of the control panel circuits and has not been acknowledged. The LED will illuminate steady after all earth faults have been acknowledged.

Supervisory – An amber LED that flashes any time an input programmed as supervisory is active and has not been acknowledged. The LED will illuminate steady after all supervisory conditions have been acknowledged.

Signal Silence – An amber LED that will illuminate any time the signal silence is active.

Trouble – An amber LED that flashes any time a trouble condition on the system is present and has not been acknowledged. The LED will illuminate steady after all trouble conditions have been acknowledged.

The control panel has the following functions:

Drift Compensation – The system employs drift compensation as a false alarm preventive measure. The drift compensation is controlled as part of the smoke head and not part of the control panel.

Calibrated Smoke Detector Sensitivity Testing – The control panel polls the smoke sensors for the current AD value approximately once every four seconds. Approximately every 4 minutes, the control panel polls the smoke sensors for the dirty value and compares the dirty value of the sensor to the alarm threshold. If the dirty value is 50% of the alarm threshold, a sensor trouble will be annunciated. A technician may also request the status of any sensor in the system through the front panel menu. In addition, a report can be printed that provides the level of sensitivity and the current level.

Remote Programming – The control panel is capable of being programmed remotely via the optional UD-1000/UD-2000 communicator. The remote modem calls the panel from a remote location and if programmed to answer phone calls it will pick up the call. Before the panel will accept any changes to the configuration data, an on-site user must enable the panel for remote access via the front panel keypad.

Positive Alarm Sequence – The control panel is programmable for Positive Alarm Sequence. When a zone is programmed as positive alarm sequence and an automatic sensor is activated, the user has up to 15 seconds to acknowledge the alarm. Failure to acknowledge the alarm will activate the evacuation appliances. If the alarm is acknowledged, the user has up to 180 seconds to reset the system. Failure to reset the system after the acknowledgment timer will result in the evacuation signal being activated.

Alarm Verification – The control panel is programmable to enable alarm verification in compliance with UL 864 and NFPA 72. Zones with smoke sensors programmed as alarm verification when activated will delay the notification circuits from activating for up to 60 seconds. If the smoke sensor is still in the alarm condition after the programmed delay, the evacuation signals will activate.

Note: Alarm activation requiring activation of two or more automatic detection devices shall not utilize alarm verification or any other time delay.

The control panel maintains the date and time independently of the main or secondary power. The date and time can be changed through the front keypad menu. In addition, daylight savings time may be programmed into the system, the dates of the time change are programmable if this feature is selected.

When an appropriate pass code is entered via the key pad into the control panel, the user may disable a device within the system. Any addressable point, NAC or suppression circuit may be disabled. When a device or circuit is disabled, the panel will indicate the off-normal condition. When the device or circuit is enabled, the trouble will clear and the panel will operate in a normal fashion. More than one device or circuit may be disabled at any one time. The circuits may individually be enabled and not affect the others.

The control panel controls the alarm threshold of the smoke detectors programmed as part of the system. The alarm threshold is limited to the listed value of the smoke detector. The selectable range of sensitivity is 1.5 percent per foot obscuration to 3.5 percent per foot obscuration. The alarm threshold may be adjusted in the computer software.

The control panel may be programmed for Day and Night mode smoke detector alarm threshold. The smoke detectors must be programmed for the day and night mode in addition to the Day/Night mode being enabled. In addition, the programmer must select the days and times for the days and nights. Up to fifty holidays may be programmed for the night mode (more sensitive) setting. The alarm threshold is only programmable for the listed range of the detector.

The control panel utilizes a concept of software zones for mapping inputs to outputs. Inputs and outputs are mapped to a single or multiple zones and when an input activates, all of the outputs within the same zone are activated. The panel also supports Cross Zoning, Counting Zones or a combination of a Cross/Count Zone. Cross zoning requires two inputs from separate zones in order to activate an output. A counting zone requires two inputs within the same zone to activate an output. The combination of a Cross/Counting Zone is two inputs in different zone or two inputs within the same zone to activate an output.

Agent Releasing - Silencing Suppression Areas

When special suppression (Agent Releasing) is employed, emergency alarm signals in the suppression area must be silenced. To accomplish this, zones in suppression areas must be programmed to Fire Override to silence emergency alarm signals.

4. Voice Functionality


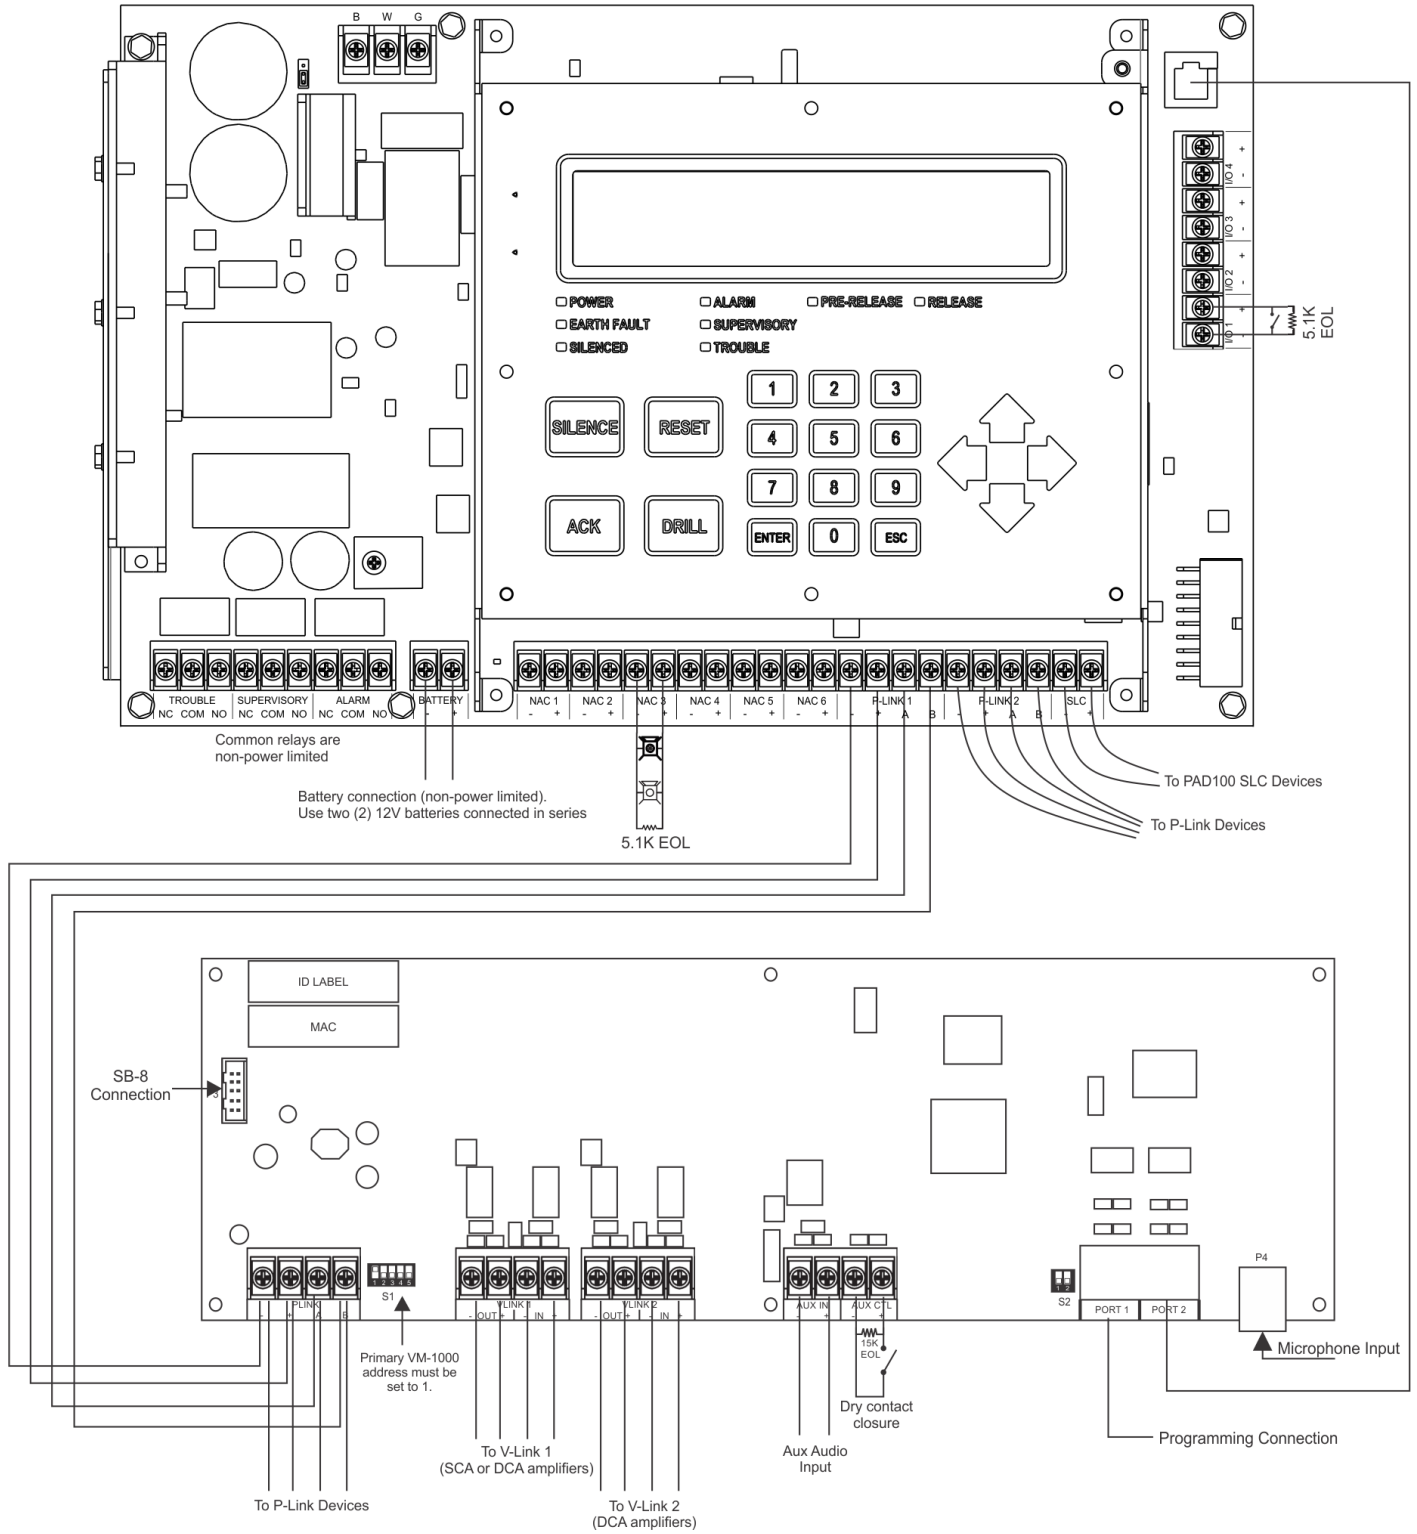


Figure 40. AFC-1000V Addressable Fire Panel with Integrated Voice Wiring Diagram

The system provides a Physical and Communication Security Level 1, Audit Control Level 0, Stored Data and Access Control Security Level 0 per UL 2572 Mass Notification Standard. The AFC-1000V is equipped with an addressable VM-1000 voice module which distributes live voice and ECS to the remote amplifier's speaker zones. The module is a P-Link device and provides two (2) Class A or two (2) Class B V-Link audio riser outputs, an auxiliary line level input, a microphone input, two (2) ethernet ports and the SB-8 connection. All circuits are power limited and supervised.

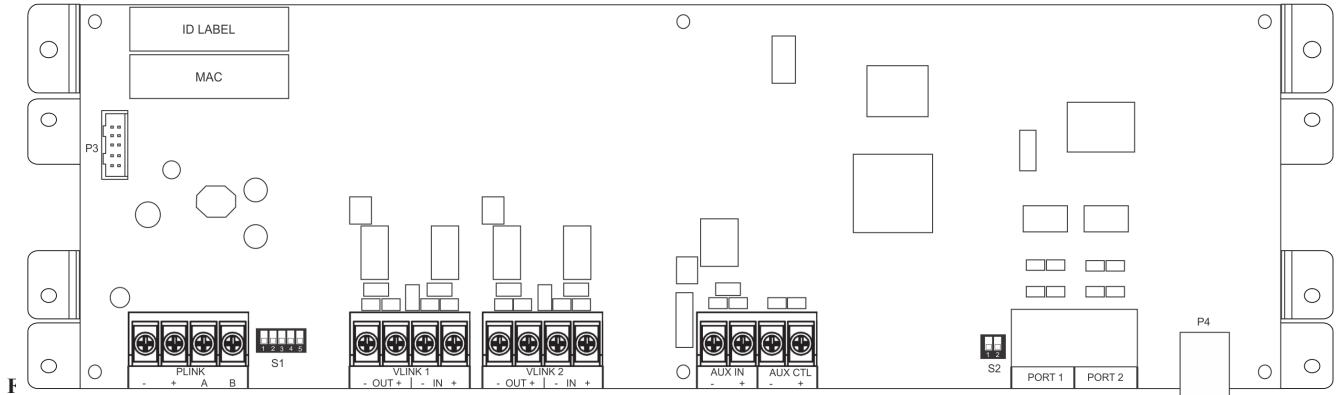

The VM-1000 communicates with the control panel P-Link via 4 conductor and is capable of Class A or Class B RS-485 communication.

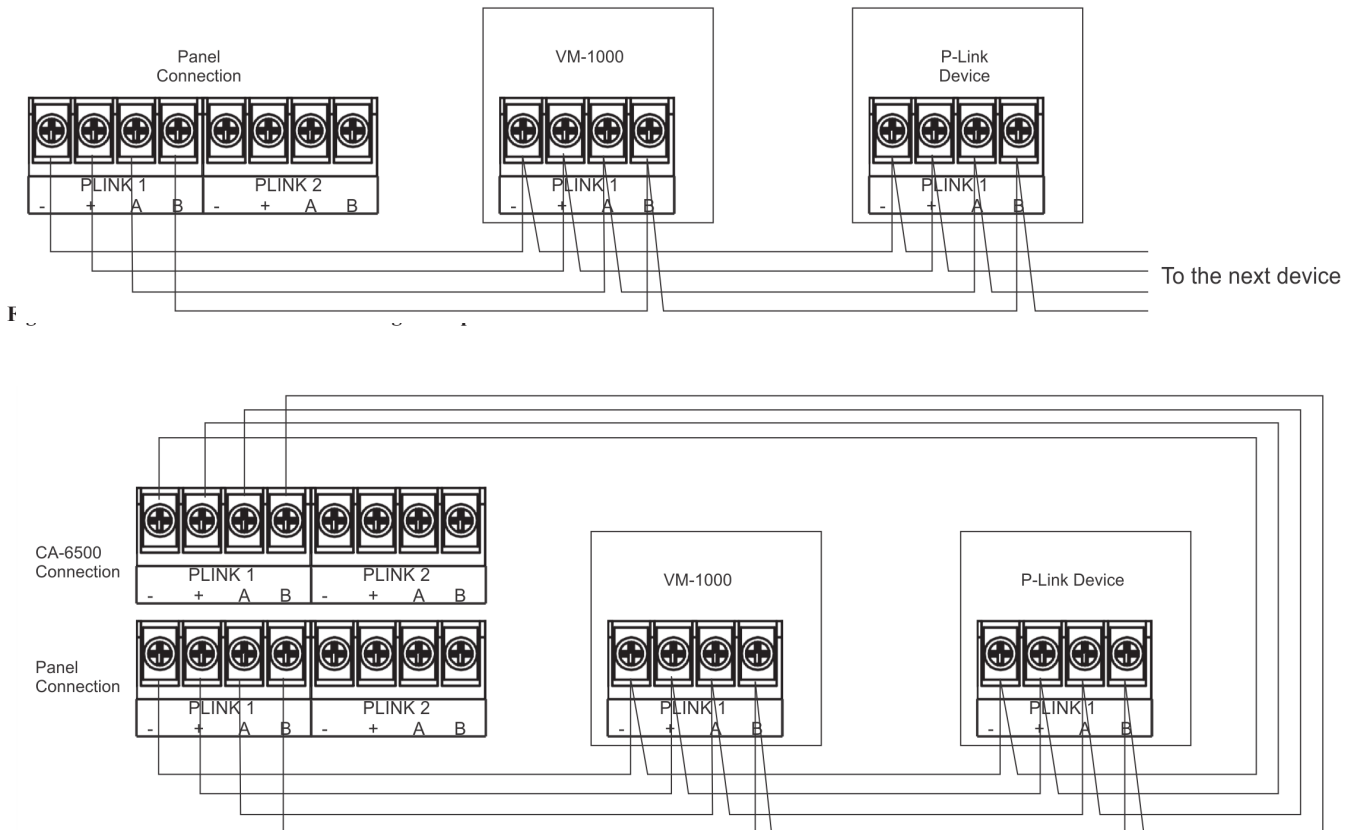


Figure 43. VM-1000 P-Link Class A Wiring Example

Upon activation, the audio signal transmits through the V-Link audio outputs to the designated remote amplifiers.

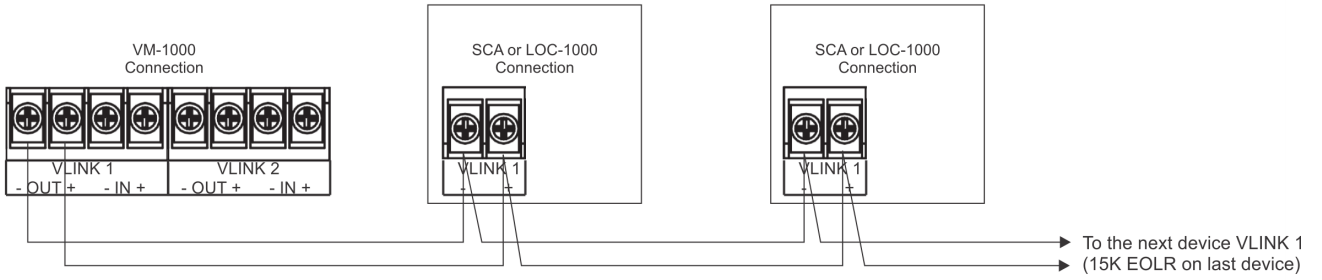


Figure 44. VM-1000 V-Link Class B Wiring Example

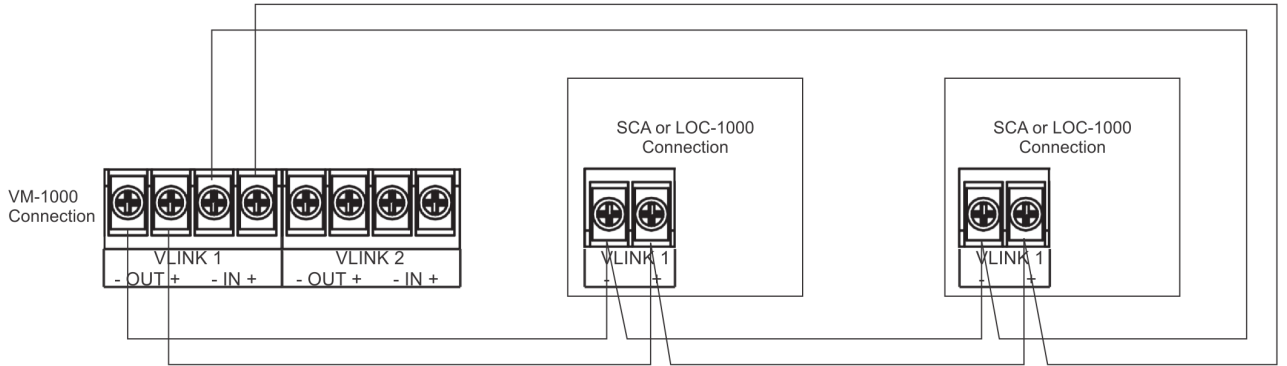


Figure 45. VM-1000 V-Link Class A Wiring Example

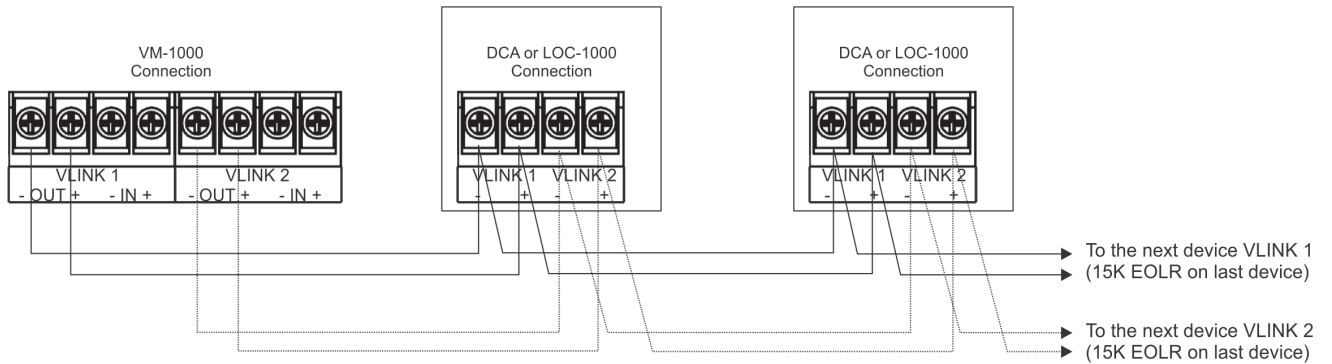


Figure 46. VM-1000 V-Link 1 and 2 Class B Wiring Example

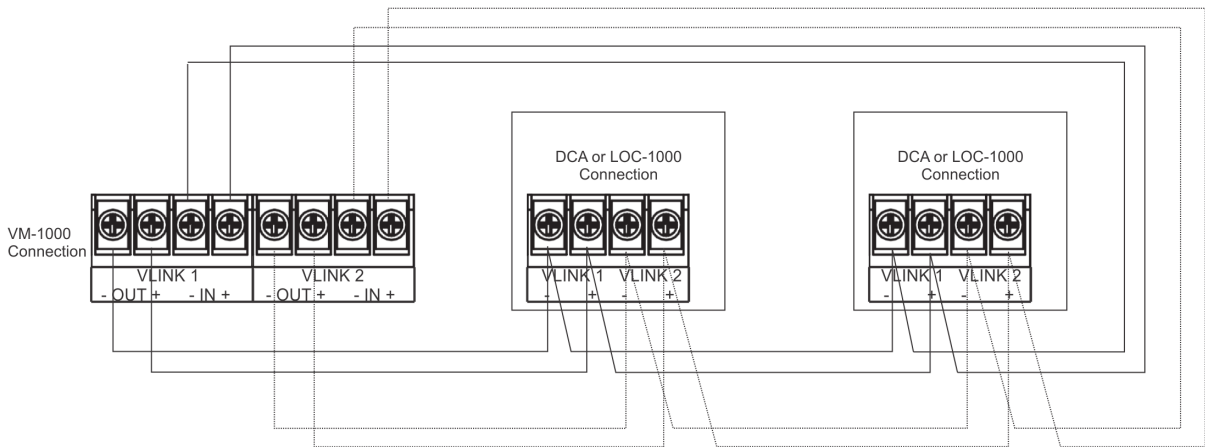


Figure 47. VM-1000 V-Link 1 and 2 Class A Wiring Example

Auxiliary Input

The auxiliary input can support external audio sources such as paging systems and background music. The input accepts 1VRMS, 600 ohm and line level audio, and is activated through a contact closure.

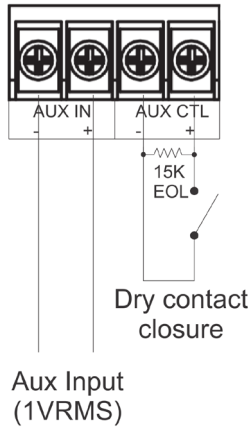


Figure 48. VM-1000 Auxiliary Input

The AFC-1000V is equipped with a SB-8 user interface to activate and monitor live ECS events. The SB-8 provides 8 programmable buttons, an All Call button, and an ECS Reset and Control button. The module includes LED indicators for Ready to Page, Trouble, Control Requested, Remotely Controlled and Locally Controlled. Each programmable button has a corresponding LED for activity and fault. Zone names/identifiers can be typed or written on the supplied card-stock, and then inserted into the SB-8.

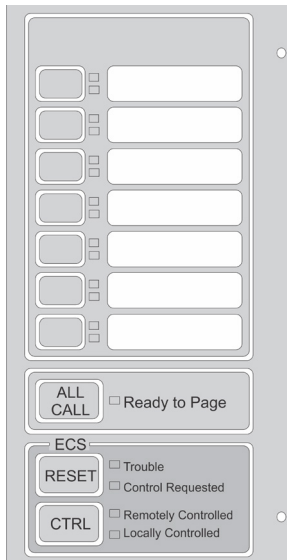


Figure 49. SB-8 Overlay

The SB-8 is supervised and connects to the VM-1000 via 10 ribbon cable. The SB-8 can also connect to the SB-24 to expand the number of switches.

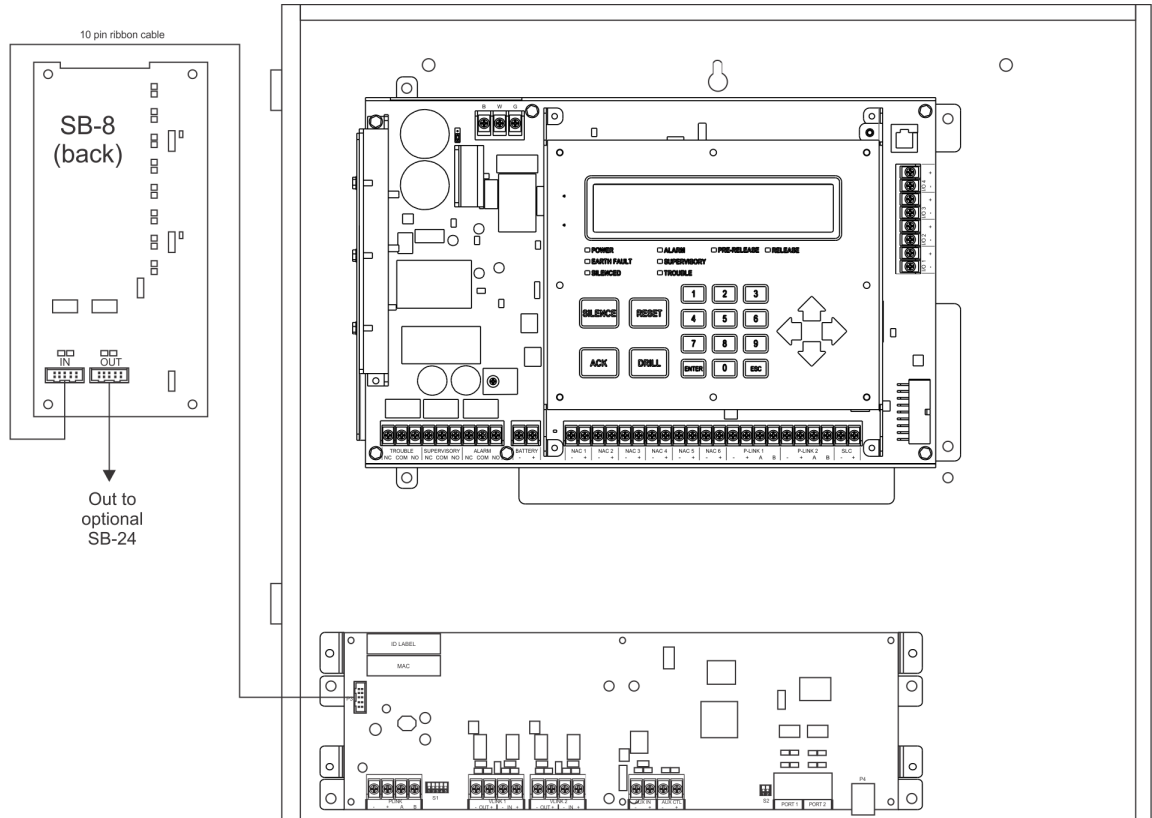


Figure 50. SB-8 Connection

The SB-8 common user buttons are the following:

ALL CALL – When the button is pressed, all programmed speaker zones are selected and all corresponding LEDs on the SB-8 and SB-24 will illuminate to indicate the zones are enabled. Speaker zones can be deselected individually by selecting the corresponding button or can relinquish all speaker zones by pressing the All Call button.

RESET – When the RESET button is pressed, all active ECS events will relinquish.

CTRL – When the CTRL button is pressed, this allows operator consoles to request control of the system when a remote operator console is in use.

The SB-8 has the following LEDs:

Ready to Page – The green LED will indicate that the panel is ready to page live voice to selected speaker zones.

Trouble – A steady amber LED will indicate a trouble condition is present and has not been acknowledged.

Control Requested – A steady amber LED indicates a LOC-1000 is requesting ECS control of the system.

Remotely Controlled – A steady amber LED indicates a remote operating console is currently in control.

Locally Controlled – A steady red LED indicates the local operating console is currently in control.

The SB-24 is an optional card that provides 24 additional programmable push buttons to assign zones and ECS functions for the AFC-1000V. Each button has a designated LED for activity and trouble indication. The SB-24 is equipped with a bracket for secure mounting. A maximum of 4 SB-24's can be installed within an AFC-1000V. Zone names/identifiers can be typed or written on the supplied card-stock, and then inserted into the SB-24.

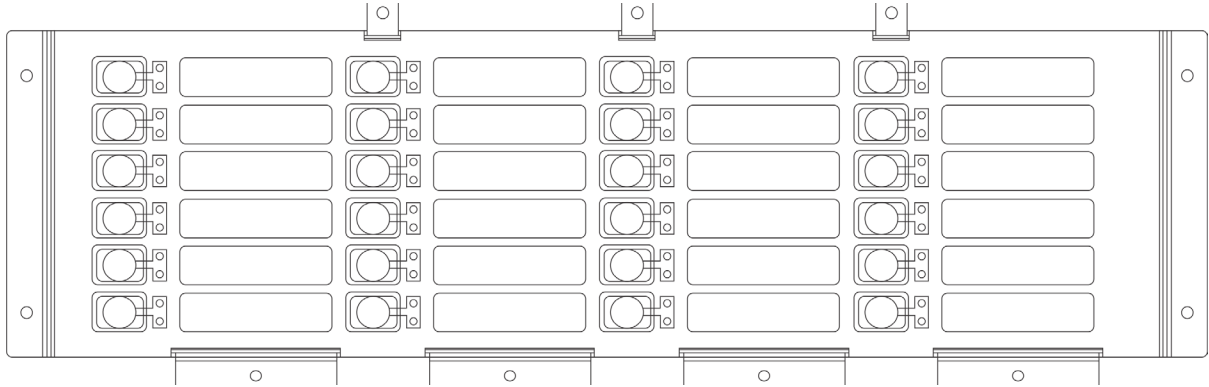


Figure 51. SB-24 Switchboard

5. Programming Options

The control panel is configured using a PC based programming tool. The panel stores the site specific configuration data in non-volatile memory.

NOTICE TO USERS, INSTALLERS, AUTHORITIES HAVING JURISDICTION, AND OTHER INVOLVED PARTIES

This product incorporates field-programmable software. In order for the product to comply with the requirements in the Standard for Control Units and Accessories for Fire Alarm Systems, UL 864, certain programming features or options must be limited to specific values or not used at all as indicated below.

| Topic | Feature or Option | Permitted in UL (Y/N) | Possible Settings | Setting(s) Permitted in UL864? | Comment |
|-------|--------------------------------|-----------------------|--------------------------------------|--------------------------------|-----------------------------|
| Misc | Idle LCD Message | Y | Yes/No | All Settings Allowed | |
| Misc | Display Events | Y | Initial Event Newest Event | Initial Event | Auto display of first event |
| Misc | SLC Blink | Y | Normal/Slow/Off | All Settings Allowed | |
| Misc | Alarm Verification Time | Y | 0-60 Sec | All Settings Allowed | |
| Misc | Waterflow Delay | Y | 0-255 Sec | All Settings Allowed | |
| Misc | AC Report Delay | Y | 30 Minutes to 30 Hours | 1-3 Hours | For UL864 use 1-3 Hr |
| Misc | DH Low AC Dropout Delay | Y | No delay, 15 Sec, 1 minute, 5 minute | All Settings Allowed | |
| Misc | Autotest Time | Y | Time of Day | All Settings Allowed | |
| Misc | Autotest Interval | Y | 1-24 Hours | All Settings Allowed | |
| Misc | Strobes Active When Silenced | Y | Yes/No | All Settings Allowed | |
| Misc | 50 Hz AC | Y | Yes/No | All Settings Allowed | |
| Misc | CO Tone on Annunciators | Y | Yes/No | All Settings Allowed | |
| Misc | Low Temp Events Are Supervised | Y | Yes/No | All Settings Allowed | |
| Misc | Disable 24 hours PZT Resound | Y | Yes/No | All Settings Allowed | |
| Misc | Display AM/PM | Y | AM/PM, 24 Hour | All Settings Allowed | |
| Misc | Synchronize to Network Time | Y | Yes/No | All Settings Allowed | |
| Misc | SNTP Server | Y | North-America.Pool.NTP.org | All Settings Allowed | |
| Misc | Time Zone | Y | 24 Time Zone Selections | All Settings Allowed | |
| Misc | DST Enabled | Y | Yes/No | All Settings Allowed | |
| Misc | DST Start | Y | Month/Day | All Settings Allowed | |
| Misc | DST End | Y | Month/Day | All Settings Allowed | |

| Topic | Feature or Option | Permitted in UL (Y/N) | Possible Settings | Setting(s) Permitted in UL864? | Comment |
|-------|-------------------------|-----------------------|--|--------------------------------|-------------------------------|
| Zone | Zone Style | Y | Alarm Supervisory PAS Auxiliary Releasing Fire Drill Waterflow Alert System Alarm System Supervisory System Trouble CO Alarm CO Supervisory ECS | All Settings Allowed | |
| Zone | Alarm Count | Y | 1-10 | All Settings Allowed | |
| Zone | Silenceable | Y | Yes/No | All Settings Allowed | |
| Zone | Silence Inhibit | Y | Yes/No | All Settings Allowed | |
| Zone | Auto Silence | Y | Yes/No | All Settings Allowed | |
| Zone | Auto Unsilence | Y | Yes/No | All Settings Allowed | |
| Zone | Restore Delay | Y | 0-300 Sec | Full range allowed | |
| Zone | Latching | Y | Yes/No | All Settings Allowed | |
| Zone | Local | Y | Yes/No | All Settings Allowed | |
| Zone | Output Pattern | Y | Constant ANSI Temp 3 March Code Double Time ANSI Temp 4 | All Settings Allowed | |
| Zone | Day Sensitivity | Y | 1.1%-3.5% | Full range allowed | Within listed range of sensor |
| Zone | Night Sensitivity | Y | 1.1 %-3.5% | Full range allowed | Within listed range of sensor |
| Zone | Heat Setting | Y | 135F-185F | Full range allowed | Within listed range of sensor |
| Zone | Low Temp Heat Sens | Y | 0F-135F | Full range allowed | |
| Zone | Enable ROR | Y | Yes/No | All Settings Allowed | |
| Zone | Combo ROR/Fixed Setting | Y | 135F-174F | All Settings Allowed | Within listed range of sensor |

| Topic | Feature or Option | Permitted in UL (Y/N) | Possible Settings | Setting(s) Permitted in UL864? | Comment |
|-----------|--------------------------|-----------------------|---|--------------------------------|---|
| SLC Point | Type PAD Protocol | Y | Photo Detector (PD) Fixed Heat Detector (HD) CO Detector (CO) Combination Photo/Heat Detector (PHD) Duct Detector (DUCT) Duct Detector w/Relay (DUCTR) Duct Detector Remote Test Switch (DRTS) Duct Remote LED Indicator (MS-RA) Duct LED w/Test Switch (MS-KA/P/R) Mini Input Module (MIM) Speaker Module (SM) Pull Station Module Single Action (PSSA) Pull Station Module Dual Action (PSDA) Relay Module (RM) Notification Appliance Circuit (NAC) Twin Relay & Twin Input (TRTI) Double Input Module (DIM) One Relay & One Input (OROI) Zone Module (ZM) Remote LED (LED) Remote LED w/Key (LEDK) Single Input Module (SIM) | All Settings Allowed | Specifies use/type of SLC device for PAD Protocol |
| SLC Point | Function PAD Protocol | Y | Sensor Only Sensor with Sound Base (AB) Sensor with Relay Base (RB) Sensor with Low Frequency Sounder Base (LFSB) Sensor with Speaker Base (SPKB) Sensor with Duct Relay Addr Relay General Purpose Addr Relay Zone Trouble Addr Relay HVAC Shutdown Addr Relay Reset Followers Addr NAC General Purpose Addr NAC Release Solenoid Addr Zone Module General Purpose Output Zone Trouble Output | All Settings Allowed | Specifies use/type of SLC device for PAD Protocol |

| Topic | Feature or Option | Permitted in UL (Y/N) | Possible Settings | Setting(s) Permitted in UL864? | Comment |
|-----------|---|-----------------------|--|--------------------------------|--|
| SLC Point | Function Nohmi Protocol | Y | Photo Detector (PSA) Photo Duct Detector (DSA) Photo/Heat Detector (PSHA) Fixed Heat Detector (FHA) Combination Fixed / ROR Heat Detector (RHA) Conv. Zone Module (CIZM) Mini Contact Mod (MCM) Single Contact Mod (SCM) Dual Contact Mod (DCM) Mon. Output Mod (MOM) Twin Relay Mod (TRM) Sounder Base (ASB) Relay Base (ARB) | All Settings Allowed | Specifies use/type of SLC device for Nohmi Protocol |
| SLC Point | Dry Contact Input Functions PAD and Nohmi Protocol | Y | Pull Station Water Flow Supervisory Tamper Fire Drill Trouble Monitor Aux Release Follower Reset Silence Fire Alarm Disable Inputs Disable Outputs Disable Inputs and Outputs Lamp Test CO Alarm CO Supervisory HVAC Reset Medical Alert Tornado Alert Process Alert Security Alert | All Settings Allowed | Applies to all dry-contact input devices & circuits Disable Inputs, Disable Outputs, and Disable Inputs / Outputs <u>cannot</u> be assigned to a Releasing Zone to comply with UL 10th Edition. |
| SLC Point | Alarm Verif | Y | Yes/No | All Settings Allowed | |
| SLC Point | Supervisory | Y | Yes/No | All Settings Allowed | |
| NACs | Function | Y | General Purpose AMSECO Sync Gentex Sync Gentex Sync with T4 System Sensor Sync Wheelock Sync Constant Output Resettable Output Door Holder Output ANSII Output City Tie Output Release Solenoid Output Sounder Base Power | All Settings Allowed | Specifies use of NAC circuit(s) |

| Topic | Feature or Option | Permitted in UL (Y/N) | Possible Settings | Setting(s) Permitted in UL864? | Comment |
|--------------|-------------------------------------|-----------------------|--|--------------------------------|--|
| Day/Night | Smoke Sensitivity | Y | Full listed range of smoke detector | All Settings Allowed | Up to 50 holidays where day mode is not active. |
| DACT | Daily Test Call | Y | Any time of day | All Settings Allowed | Alternates between line 1 and 2 if line 2 is enabled. |
| E-Mail | Email Status Reports | N | Alarms, Troubles, Supervisory, Test, History & Status Reports | | |
| IP-Reporting | IP Based Central Station Reporting | Y | Alarm, Supervisory, Trouble & Test Reports | All Settings Allowed | |
| Misc | Voice Options | Y | Single Channel Dual Channel | All Settings Allowed | Initial alert singal pause can programmed between 1-255 sec. |
| Misc | Voice Options | Y | Fire is Higher Priority ECS is Higher Priority | All Settings Allowed | |
| Misc | Reset Audio Pattern after Paging | Y | Yes/No | All Settings Allowed | |
| Misc | Reset Audio Pattern after New Event | Y | Yes/No | All Settings Allowed | |
| Misc | Enable Automatic All Call | Y | Yes/No | All Settings Allowed | |
| Misc | Enable Override Chirp | Y | Yes/No | All Settings Allowed | |
| Misc | ECS Control Lockout | Y | Lockout Disabled Lockout Indefinite Lockout Time | All Settings Allowed | |
| Misc | Auto-relinquish ECS Control | Y | Auto-relinquish ECS Control Disabled Auto-relinquish ECS Control Time | All Settings Allowed | Timeout is programmable from 1-255 sec. |
| Zone | Audio Pattern | Y | Select audio pattern defined by user | All Settings Allowed | |
| Zone | Audio Channel | Y | Channel 1 Channel 2 (only applicable for dual channel system) | All Settings Allowed | |

Network Programming

Programming of a networks system uses all the above options. In addition, reference points are used to associate points between panels. Panels are also assigned to buildings allowing interactions between buildings via these reference points. Please refer to 8830161 Network Programming Guide and www.pottersignal.com for more information.

6. Testing/Maintenance

The control panel has one fuse on the board for the AC power over current protection.

The AC fuse is rated at 8A 250VAC Time-Lag and screened onto the main board as F1.

The batteries are to be replaced at least once every four years. The batteries are required to be UL recognized batteries with a date of manufacture permanently marked on the battery. The battery is to be tested at least annually and if the battery is showing signs of failure, it is to be replaced.

The battery is to remain in the cabinet with nothing on or around the batteries. Only properly sized sealed lead acid batteries are to be used with the control panel. Use of another battery or not providing the proper clearance may result in a fire or an explosions.

The control panel is required to be installed in accordance with local and state building codes and NFPA 72 (National Fire Alarm Code).

The control panel and related system is required to be inspected and tested in accordance with NFPA 72.

7. Compatibilities

NAC Appliances

Please refer to Potter document 5403592 NAC Compatibility Document.

Two Wire Smoke Detectors

None listed with the control panel, all devices listed the PAD100-ZM or CIZM, please refer to the PAD100-ZM or CIZM Installation Sheet.

Note: PAD100-ZM and CIZM modules require a 24 VDC power source. When using the CIZM, the power source must be 19.0 VDC – 26.4 VDC. When using the PAD100-ZM, the power source must be 19.6 VDC – 28 VDC. Power source must be power limited, and UL1481 listed.

Releasing Compatibility Refer to Document #5403625.

Network Compatibility

The IPA series, AFC/ARC series and the PFC-4064 can be interconnected via the NCE and NCF network cards.

SLC Devices * PAD Series refers to PAD100, PAD200 and PAD300

| Nohmi Protocol | PAD Protocol |
|---|---|
| PSA – Photoelectric Smoke Detector | PAD Series*-PD – Photo Detector |
| PSHA – Photoelectric/Heat Smoke Detector | PAD Series*-HD – Fixed Heat Detector (PAD100 and PAD300 Only) |
| FHA – Fixed Temperature Heat Detector | PAD Series *-CD – CO Detector (PAD100 and PAD300 Only) |
| RHA – Rate of Rise/fixed Temperature Heat Detector | PAD Series*-PCD - Photo/CO Detector (PAD200 and PAD300 Only) |
| DSA – Photo Duct Detector | PAD Series*-PHCD - Photo/Heat/CO Detector (PAD200 Only) |
| APS-SA/DA – Addressable Pull Station (Single Action / Dual Action) | PAD Series*-PHD – Combination Photo/Heat Detector |
| AIB – Addressable Isolator Base | PAD Series*-DUCT – Duct Detector |
| ASB – Addressable Sounder Base | PAD Series*-DUCTR – Duct Detector w/Relay |
| ARB – Addressable Relay Base | PAD Series*-DD – Duct Detector Sensor |
| MCM – Miniature Contact Module | PAD100-DRTS – Duct Detector Remote Test Switch |
| SCM-4 – Single Contact Module | MS-RA – DUCT Remote LED Indicator |
| DCM-4 – Dual Contact Module | MS-KA/P/R – DUCT LED w/Test Switch |
| TRM-4 – Twin Relay Module | PAD100-MIM – Mini Input Module |
| MOM-4 – Monitored Output Module | PAD100-SM – Speaker Module |
| CIZM-4 – Conventional Input Zone Module | PAD100-PSSA – Pull Station Module Single Action |
| SCI – Short Circuit Isolator | PAD100-PSDA – Pull Station Module Dual Action |

| Nohmi Protocol | PAD Protocol |
|-----------------------|---|
| | PAD Series *-SB – Addressable Sounder Base (PAD100 and PAD300 Only) |
| | PAD Series *-RB – Addressable Relay Base (PAD100 and PAD300 Only) |
| | PAD Series *-IB – Addressable Isolator Base (PAD100 and PAD300 Only) |
| | PAD100-IM – Isolator Module |
| | PAD100-RM – Relay Module |
| | PAD100-NAC – Notification Appliance Circuit |
| | PAD100-TRTI – Twin Relay-Twin Input |
| | PAD100-DIM – Double Input Module |
| | PAD100-OROI – One Relay-One Input |
| | PAD100-ZM – Zone Module |
| | PAD100-LED – Remote LED |
| | PAD100-LEDK – Remote LED w/Key |
| | PAD100-SIM – Single Input Module |
| | PAD Series *-LFSB - Low Frequency Sounder Base (PAD100 and PAD300 Only) |
| | PAD100-SPKB - Speaker Base |

DACT/DACR Compatibility

UD-1000/UD-2000 DACT

The DACT transmits in Ademco Contact ID and Security Industries Association’s Digital Communication Standards (SIA-DCS). Each account may be configured for Contact ID or SIA-DCS independent of the other accounts setting. Therefore some account(s) could be Contact ID and others could be SIA-DCS or vice versa. Similarly, accounts could be the same reporting type.

Compatible Receivers

Silent Knight Model 9500/9800 (Ademco MX8000)

Sur-Gard System III

SG-DRL3 (POTS Line Card)

IP Reporting Compatibility

Sur-Gard System III

SG-DRL3-IPCA (Network Line Card)

Notes:

Where the fire alarm transmitter is sharing on-premises communications equipment, the shared equipment shall be Listed.

Secondary power shall be provided for all equipment necessary for the transmission and reception of alarm, supervisory and trouble signals at the protected premises.

Secondary power shall be provided for all equipment necessary for the transmission and reception of alarm, supervisory and trouble signals at the supervising station.

The connection between the FACP and on-premises communications equipment shall be limited to 20 feet and enclosed in conduit or equivalently protected against mechanical injury.

RS-485 Devices

PAD100-SLCE Provides an additional PAD protocol SLC loop with a maximum of 127 addressable points.

| | |
|---------------------|--|
| SLCE-127 | Provides an additional Nohmi protocol SLC loop with a maximum of 127 addressable points. |
| RA-6500R / RA-6500F | 4x40 character LCD Remote Annunciator |
| RA-6075R | 2x16 character LCD Remote Annunciator |
| PSN-1000/E | 10 Amp Power Expander |
| LED-16 / LED-16F | Device that displays alarm/supervisory/trouble conditions for up to 16 zones and five (5) non-programmable system LEDs that annunciate system's overall conditions (Power, Earth, Silenced, Alarm, Supervisory, & Troubles). |
| DRV-50 | Device that provides 50 LED outputs can be individually mapped to any zone, four (4) programmable supervised dry contact inputs, and five (5) non-programmable system LEDs annunciate the overall system condition (Power, Earth, Silenced, Alarm, Supervisory, & Troubles). |
| RLY-5 | Device that provides five (5) Form-C relay outputs which can be individually mapped to any zone. |
| FCB-1000 | Device that provides remote IP connection. |
| FIB-1000 | Device that converts the 4 wire P-Link bus to/from fiber optic cable. |
| MC-1000 | Allows up to 63 AFC series panels to report to the central station through a shared phone line or Internet connection. |
| IDC-6 | Device that provides six (6) additional conventional Class B inputs or three (3) Class A inputs that can be individually mapped to any zone. |
| NCE-1000 | Device that is used to network fire alarm panels using CAT5 Ethernet cable. |
| NCF-1000 | Device that is used to network fire alarm panels using fiber optic cable. |
| VM-1000 | Device used to distribute live voice and audible messages to remote amplifiers. |
| SCA-2525 | Single channel amplifier, 25W and 25VRMS. Equipped with 8 Class B or 8 Class A speaker outputs. |
| SCA-2570 | Single channel amplifier, 25W, and 25VRMS or 70VRMS selectable. Equipped with 8 Class B or 8 Class A speaker outputs. |
| SCA-5025 | Single channel amplifier, 50W and 25VRMS. Equipped with 8 Class B or 8 Class A speaker outputs. |
| SCA-5070 | Single channel amplifier, 50W, and 25VRMS or 70VRMS selectable. Equipped with 8 Class B or 8 Class A speaker outputs. |
| SCA-10070 | Single channel amplifier, 100W, and 25VRMS or 70VRMS selectable. Equipped with 8 Class B or 8 Class A speaker outputs. |
| SCA-50INT | Small form single channel amplifier, 50W and 25VRMS or 70VRMS selectable. Equipped with 4 Class B or 4 Class A speaker outputs |
| DCA-5025 | Dual channel amplifier, 50W and 25VRMS. Equipped with 8 Class B or 8 Class A speaker outputs. |
| DCA-10025 | Dual channel amplifier, 100W and 25VRMS. Equipped with 8 Class B or 8 Class A speaker outputs. |
| LOC-1000 | Local operator console device used to control and monitor the system from remote areas. |
| FFT-1000 | Device used to provide 2-way phone communication for first responders. Equipped with 24 Class B or 12 Class A phone circuits and local handset. |

Class A Expander

CA-6500 Class A Expander

Printers

Keltron 90 Series Fire Alarm printer or other UL Listed fire alarm printer (Ancillary).

8. System Configurations

AFC-1000 (1,270 Point System)

| Model | Description | Local | Releasing Service | Auxiliary | Remote Station | Central Station | Proprietary | EVAC | Mass Notification |
|----------------------------------|-----------------------------------|-------|-------------------|-----------|----------------|-----------------|-------------|------|-------------------|
| AFC -1000 | Main Board/Panel Assembly | Y | Y | Y | Y | Y | Y | Y | Y |
| CA-6500 | Class A Expander | O | O | O | O | O | O | O | O |
| UD-1000 | DACT | N | N | N | O | O | O | O | O |
| UD-2000 | DACT | N | N | N | O | O | O | O | O |
| RA-6075R RA-6500R RA-6500F | LCD type remote Annunciator | O | O | O | O | O | O | O | O |
| PSN-1000 | Fire Power Expander | O | O | O | O | O | O | O | O |
| PAD100-SLCE SLCE-127 | SLC Loop Expander | O | O | O | O | O | O | O | O |
| 3005013 | End of line resistor assembly. | Y | Y | Y | Y | Y | Y | O | O |
| 3005012 | End of line resistor and diode | N | Y | O | O | O | O | O | O |
| 3005021 | End of line resistor | N | Y | O | O | O | O | O | O |
| LED-16 LED-16F | 16 Zone LED Annunciator | O | O | O | O | O | O | O | O |
| RLY-5 | 5 Output Relay Board | O | O | O | O | O | O | O | O |
| DRV-50 | 50 Output LED Driver | O | O | O | O | O | O | O | O |
| FCB-1000 | Fire Communications Bridge | O | O | O | O | O | O | O | O |
| FIB-1000 | Fiber Interface Bridge | O | O | O | O | O | O | O | O |
| SPG-1000 | Serial/Parallel Printer Driver | O | O | O | O | O | O | O | O |
| MC-1000 | Multi-Connect Module | O | O | O | O | O | O | O | O |
| PAD100-DIM | Dual Input Module | O | O | O | O | O | O | O | O |
| PAD100-LED | Addressable LED Module | O | O | O | O | O | O | O | O |
| PAD100-OROI | One Relay – One Input Module | O | O | O | O | O | O | O | O |
| PAD100-RM | Relay Module | O | O | O | O | O | O | O | O |
| PAD100-SIM | Single Input Module | O | O | O | O | O | O | O | O |
| PAD100-TRTI | Two Relay – Two Input Module | O | O | O | O | O | O | O | O |
| PAD100-ZM | Zone Module | O | O | O | O | O | O | O | O |
| PAD100-IM | Isolator Module | O | O | O | O | O | O | O | O |
| PAD100-NAC | NAC Module | O | O | O | O | O | O | O | O |
| PAD100-SM | Speaker Module | O | O | O | O | O | O | O | O |
| PAD100-MIM | Micro Input Module | O | O | O | O | O | O | O | O |
| PAD100-LEDK | LED Key Switch Module | O | O | O | O | O | O | O | O |
| IDC-6 | INITIATING DEVICE EXPANDER CARD | O | O | O | O | O | O | O | O |
| AE-2 | Accessory Cabinet | O | O | O | O | O | O | O | O |
| AE-8 | Cabinet | O | O | O | O | O | O | O | O |
| AE-16 | Cabinet | O | O | O | O | O | O | O | O |
| NCF-1000 | Class A/B Network Fiber module | O | O | O | O | O | O | O | O |
| NCE-1000 | Class A/B Network Ethernet module | O | O | O | O | O | O | O | O |

AFC-1000V (Integrated Voice)

| Model | Description | Local | Releasing Service | Auxiliary | Remote Station | Central Station | Proprietary | EVAC | Mass Notification |
|----------------------------|-----------------------------------|-------|-------------------|-----------|----------------|-----------------|-------------|------|-------------------|
| AFC -1000V | Main Board/Panel Assembly | Y | Y | Y | Y | Y | Y | Y | Y |
| CA-6500 | Class A Expander | O | O | O | O | O | O | O | O |
| UD-1000 | DACT | N | N | N | O | O | O | O | O |
| UD-2000 | DACT | N | N | N | O | O | O | O | O |
| RA-6075R RA-6500R RA-6500F | LCD type remote Annunciator | O | O | O | O | O | O | O | O |
| PSN-1000 | Fire Power Expander | O | O | O | O | O | O | O | O |
| PAD100-SLCE SLCE-127 | SLC Loop Expander | O | O | O | O | O | O | O | O |
| 3005013 | End of line resistor assembly. | Y | Y | Y | Y | Y | Y | O | O |
| 3005012 | End of line resistor and diode | N | Y | O | O | O | O | O | O |
| 3005021 | End of line resistor | N | Y | O | O | O | O | O | O |
| LED-16 LED-16F | 16 Zone LED Annunciator | O | O | O | O | O | O | O | O |
| RLY-5 | 5 Output Relay Board | O | O | O | O | O | O | O | O |
| DRV-50 | 50 Output LED Driver | O | O | O | O | O | O | O | O |
| FCB-1000 | Fire Communications Bridge | O | O | O | O | O | O | O | O |
| FIB-1000 | Fiber Interface Bridge | O | O | O | O | O | O | O | O |
| SPG-1000 | Serial/Parallel Printer Driver | O | O | O | O | O | O | O | O |
| MC-1000 | Multi-Connect Module | O | O | O | O | O | O | O | O |
| PAD100-DIM | Dual Input Module | O | O | O | O | O | O | O | O |
| PAD100-LED | Addressable LED Module | O | O | O | O | O | O | O | O |
| PAD100-OROI | One Relay – One Input Module | O | O | O | O | O | O | O | O |
| PAD100-RM | Relay Module | O | O | O | O | O | O | O | O |
| PAD100-SIM | Single Input Module | O | O | O | O | O | O | O | O |
| PAD100-TRTI | Two Relay – Two Input Module | O | O | O | O | O | O | O | O |
| PAD100-ZM | Zone Module | O | O | O | O | O | O | O | O |
| PAD100-IM | Isolator Module | O | O | O | O | O | O | O | O |
| PAD100-NAC | NAC Module | O | O | O | O | O | O | O | O |
| PAD100-SM | Speaker Module | O | O | O | O | O | O | O | O |
| PAD100-MIM | Micro Input Module | O | O | O | O | O | O | O | O |
| PAD100-LEDK | LED Key Switch Module | O | O | O | O | O | O | O | O |
| IDC-6 | INITIATING DEVICE EXPANDER CARD | O | O | O | O | O | O | O | O |
| AE-2 | Accessory Cabinet | O | O | O | O | O | O | O | O |
| AE-8 | Cabinet | O | O | O | O | O | O | O | O |
| AE-16 | Cabinet | O | O | O | O | O | O | O | O |
| NCF-1000 | Class A/B Network Fiber module | O | O | O | O | O | O | O | O |
| NCE-1000 | Class A/B Network Ethernet module | O | O | O | O | O | O | O | O |
| FFT-1000 | Fire Fighter Telephone | O | O | O | O | O | O | O | O |
| LOC-1000 | Local Operator Console | O | O | O | O | O | O | O | O |
| VM-1000 | Voice Module | O | O | O | O | O | O | Y | Y |
| FFT-EXP | Expander Module | O | O | O | O | O | O | O | O |

| | | | | | | | | | |
|---|--|---|---|---|---|---|---|------|------|
| LOC-RA6500R | Remote Annunciator | O | O | O | O | O | O | O | O |
| SB-8 | Switch Board(8) Programmable Interface | O | O | O | O | O | O | Y | Y |
| SB-24 | Switch Board(24) Programmable Interface | O | O | O | O | O | O | O | O |
| FSB-8 | Switch Board(8) Programmable Interface | O | O | O | O | O | O | O | O |
| FSB-24 | Switch Board(24) Programmable Interface | O | O | O | O | O | O | O | O |
| 70V-1000 | Voltage Booster | O | O | O | O | O | O | O | O |
| BUA-1000 | Backup Amplifier | O | O | O | O | O | O | O | O |
| SCA-2525, SCA-2570, SCA-5025, SCA-5070, SCA-10070 | Addressable Single Channel Amplifiers | O | O | O | O | O | O | O | O |
| DCA-5025 DCA-10025 | Addressable Dual Channel Amplifiers | O | O | O | O | O | O | O | O |
| FSB-24 | Switch Board(24) Programmable Interface | O | O | O | O | O | O | O | O |
| 70V-1000 | Voltage Booster | O | O | O | O | O | O | O | O |
| BUA-1000 | Backup Amplifier | O | O | O | O | O | O | O | O |
| SCA-2525, SCA-2570, SCA-5025, SCA-5070, SCA-10070 | Addressable Single Channel Amplifiers | O | O | O | O | O | O | Y(1) | Y(1) |
| DCA-5025 DCA-10025 | Addressable Dual Channel Amplifiers | O | O | O | O | O | O | Y(1) | Y(1) |

Y = Yes, required for applicable section.

N = No, not required for applicable section.

O = Optional, may or may not be used, has no affect on the applicable section.

| | |
|--|--|
| Normal Standby | The green AC POWER LED will be illuminated and the user defined message on the LCD will be displayed. If the AC power is removed for more than 5 seconds, the green AC power LED will extinguish. |
| Acknowledging | Off normal events are acknowledged by pressing the ACK key while reviewing events. After all events have been acknowledged, the buzzer will deactivate and the associated LED will stop flashing and remain on continuously. During Positive Alarm Sequence operation the "ACK" key must be pressed within 15 seconds of the alarm initiation to activate the investigation timer. |
| Alarm Condition | The red ALARM LED will be illuminated anytime an alarm is occurring in the system. The LCD will display the number of inputs in alarm, and the buzzer will be activated. The buzzer will remain active until all alarms have been acknowledged, or until the Silence key is pressed. |
| Silencing Alarm | When the system is in Alarm, the notification circuits (strobes and horns) can be shut off by pushing the SILENCE button. |
| Resetting Alarm | After the condition that caused the alarm has been identified and corrected, the system may be reset to the Normal Standby by pressing the RESET button. |
| Supervisory Condition | When a supervisory condition is detected, the amber SUPERVISORY LED will illuminate and the buzzer will sound. The LCD display will indicate the number of supervisory events that are active. The local buzzer will sound until all supervisory events have been acknowledged. |
| Restoring Supervisory Condition | If the Supervisory condition is non-latching, once the device is restored to the normal condition, the supervisory event will clear. If the supervisory condition is latching, the device that was activated must be restored and the RESET pressed. |
| Trouble Condition | When a fault condition occurs, the amber TROUBLE LED will illuminate and the local buzzer will sound until the fault is removed or the ACK button is pressed acknowledging the trouble condition. If the buzzer is acknowledged and the fault is not removed within 24 hours, the buzzer will resound. |
| Silencing Trouble(s) | When a trouble is occurring, the local buzzer will sound until either all troubles have been acknowledged or the SILENCE button is pressed. |
| Ground Fault | When a conductor contacts and earth ground, the amber EARTH FAULT LED will illuminate and the LCD display will provide further information of where the fault is located. |
| Pre-Release (Releasing Panels Only) | The amber Pre-Release LED will illuminate when the system is in a count down timer for an agent release. Additionally, pre-release events and countdown timers are displayed on the LCD. |
| Release (Releasing Panels Only) | The red Release LED will illuminate when a release condition is active. Additionally, release events will be displayed on the LCD. |
| Agent Release Abort (Releasing Panels Only) | If the system is being used as an agent releasing panel and a pre-discharge timer is programmed, the release may be aborted by pressing the abort switch. For ULI installations, pushing the Abort will allow the timer to countdown until 10 seconds and then halt. Releasing and reactivating the Abort will set the timer to 10 seconds. |
| Testing and Maintenance | Test this system monthly or more frequently as required by the AHJ. Before conducting any testing contact the building personnel and the monitoring facility as applicable. When testing a system configured for releasing, activate the releasing disconnect switch to prevent accidental discharge of a suppression system. Test the circuits as outlined in the Installation Manual. Test in accordance with NFPA 72 Inspection, Testing and Maintenance Chapter(s) and any local requirements. The batteries should be marked with the date of installation and replaced every four years or sooner if battery trouble occurs. Batteries should be checked with a tester acceptable to the AHJ such as a Stone Technologies model STC612A or equivalent. In case of a fuse replacement, refer to the Installation Manual for the proper rating. Contact the agency below for service or operational questions. |
| All Call | When the button is pressed, all programmed speaker zones are selected and corresponding LEDs on the SB-8 and SB-24 will illuminate to indicate the zones are enabled. Speaker zones can be deselected individually by selecting the corresponding button or can relinquish all speaker zones by pressing the All Call button. |
| ECS Reset | When the RESET button is pressed, all active ECS events will relinquish. |
| CTRL | When the CTRL button is pressed, this allows operator consoles to request control of the system when a remote operator console is in use. |
| Control Requested | A steady amber LED indicates a LOC-1000 is requesting control of the system. |
| Remotely Controlled | A steady amber LED indicates a remote operating console is currently in control. |
| Locally Controlled | A steady red LED indicates the local operating console is currently in control. |

For service, contact:

Name: _____

Company: _____

Address: _____

Telephone: _____

9. System Power/Size

| Panel | # NACs | Rating per NAC | SLC Power | Notes | Class |
|----------|---|----------------|--------------------------|--|--|
| AFC-1000 | 6 up to 10 if all I/O circuits configured as NACs | 3 Amp | Maximum Load of 90.61 mA | One built-in SLC Loop, up to 9 additional using PAD100-SLCE and/or SLCE-127 Loop Expanders | SLC – Class A or B NAC – Class A or B P-Link – Class A or B I/O – Class B only All are low voltage and power limited |

System Size

| Accessories/subassemblies | Maximum System Size |
|---------------------------|--|
| AFC-1000 | 1,270 maximum points any combination of detectors or modules if 9 PAD100-SLCE and/or SLCE-127 SLC Loop Expanders are added |
| | 6 notification circuits on the main board 4 I/O circuits |
| UD-1000/UD-2000 | 1 DACT |

Appendix A: Battery Calculation Work Sheets

| Description | Quantity | Standby (mA) | Total Standby (mA) | Alarm (mA) | Total Alarm (mA) |
|---|----------|--------------|--------------------|------------|------------------|
| Main board (AFC-1000) | 1 | 130 | 130 | 220 | |
| LCD Remote RA-6075R | | 20 | | 25 | |
| LCD Remote RA-6500R or RA-6500F | | 20 | | 25 | |
| CA-6500 Class A Expander | | 12 | | 44 | |
| UD-1000/UD-2000 DACT | | 16 | | 23 | |
| PSN-1000/E Power Expander | | 15 | | 15 | |
| LED-16 or LED-16F P-Link Current | | 25 | | 25 | |
| LED-Current (if applicable, see Note 5) | | 15 | | 210 | |
| DRV-50 | | 25 | | 25 | |
| LED-Current (#LEDs x 5 mA; if applicable, see Note 5) | | 10 | | 215 | |
| RLY-5 | | 25 | | 35 | |
| Relay Current (if applicable, see Note 5) | | 10 | | 135 | |
| FCB-1000 Fire Communications Bridge | | 25 | | 25 | |
| FIB-1000 Fiber Interface Bridge | | 30 | | 30 | |
| SPG-1000 Serial Parallel Gateway | | 40 | | 40 | |
| MC-1000 Multi-Connect Module | | 10 | | 10 | |
| IDC-6 Initiating Device Circuit | | 20 | | 20 | |
| IDC PWR (See Note 5) | | | | | |
| Class B Input Zones (Per Zone) | | 5 | | 45 | |
| Class A Input Zones (Per Zone) | | 5 | | 45 | |
| NCE-1000 | | 50 | | 50 | |
| NCF-1000 | | 95 | | 95 | |
| VM-1000 | | 53 | | 69 | |
| SB-8 | | 4 | | 13 | |
| SB-24 | | 4 | | 27 | |
| SCA-2525 | | 15 | | 15 | |
| SCA-2570 | | 15 | | 15 | |
| SCA-5025 | | 15 | | 15 | |
| SCA-5070 | | 15 | | 15 | |
| SCA-10070 | | 15 | | 15 | |
| DCA-5025 | | 15 | | 15 | |
| SCA-50INT | | 50 | | 138 | |
| DCA-10025 | | 15 | | 15 | |
| LOC-1000 | | 77 | | 107 | |
| LOC-PSN1000 | | 15 | | 15 | |
| FFT-1000R/L | | 15 | | 15 | |
| NAC 1 | | | | | |
| NAC 2 | | | | | |
| NAC 3 | | | | | |

| Description | Quantity | Standby (mA) | Total Standby (mA) | Alarm (mA) | Total Alarm (mA) | |
|---|----------|--------------|--------------------|---|------------------|---------|
| NAC 4 | | | | | | |
| NAC 5 | | | | | | |
| NAC 6 | | | | | | |
| I/O 1 | | | | | | |
| I/O 2 | | | | | | |
| I/O 3 | | | | | | |
| I/O 4 | | | | | | |
| Built-in SLC Current Draw - Calculated by SLC worksheet | | | | | | |
| SLC Loop# ____ | | | | | | |
| SLC Loop# ____ | | | | | | |
| SLC Loop# ____ | | | | | | |
| SLC Loop# ____ | | | | | | |
| SLC Loop# ____ | | | | | | |
| SLC Loop# ____ | | | | | | |
| SLC Loop# ____ | | | | | | |
| SLC Loop# ____ | | | | | | |
| SLC Loop# ____ | | | | | | |
| SLC Loop# ____ | | | | | | |
| | | Total (mA) | | Total (ma) | | |
| | | | Convert to Amps | x 0.001 | Convert to Amps | x 0.001 |
| (*Refer to maximum allowable standby current) Total A: | | | | | Total A: | |
| Multiply by standby hours | | | x ____ | <u>60 minutes per hour</u> Alarm time (minutes) Example: 5 minute alarm: enter 12 10 minute alarm: enter 6 | ÷ ____ | |
| Total Standby AH | | | | Total Alarm AH | | |
| | | | | +Total Standby AH | | |
| | | | | Total AH | | |
| | | | | Efficiency Factor | ÷ 0.80 | |
| | | | | Required AH | | |

| | | | | | | | | | |
|---|---------|--------|-------|--------|-------|---------|-------|---------|---|
| <p>*Maximum Allowable Standby Current (UL 24-Hour standby time)</p> <table> <tr><td>7 AH</td><td>.198 A</td></tr> <tr><td>18 AH</td><td>.565 A</td></tr> <tr><td>33 AH</td><td>1.065 A</td></tr> <tr><td>55 AH</td><td>1.798 A</td></tr> </table> | 7 AH | .198 A | 18 AH | .565 A | 33 AH | 1.065 A | 55 AH | 1.798 A | <p>Important Notes:</p> <ol style="list-style-type: none"> 1) FACP enclosure can house up to two (2) 18 AH batteries. Larger batteries require accessory enclosure, part #SSU00500. 2) NFPA 72 requires 24 hours of standby power followed by 5 minutes alarm activation. 3) Door holder circuits configured to disconnect upon AC loss need not be included in the battery standby calculation since they will not draw power during that time. Door holders will contribute to standby current draw when AC is present. 4) Total current must not exceed power supply rating (10A). 5) LED/Relay/IDC-6 current must be accounted for in the battery calculation for the supplying source. |
| 7 AH | .198 A | | | | | | | | |
| 18 AH | .565 A | | | | | | | | |
| 33 AH | 1.065 A | | | | | | | | |
| 55 AH | 1.798 A | | | | | | | | |

Built-in SLC Current Draw Worksheet (PAD Protocol)

| Device Type | Qty | Standby (mA) | Total Standby (mA) | Alarm Standby (mA) | Total Alarm (mA) |
|--|-----|----------------------------|--------------------|--------------------------|------------------|
| Photo detector (PAD Series*-PD) *Note 7 | | .300 | | .300 | |
| Photo/CO detector (PAD200 and PAD300) | | .300 | | .300 | |
| Photo/Heat/CO detector (PAD200-PCHD) | | .300 | | .300 | |
| Fixed heat detector (PAD100 and PAD300) | | .300 | | .300 | |
| CO detector (PAD100 and PAD300) | | .300 | | .300 | |
| Combination photo/heat detector (PAD Series*-PHD)*Note 7 | | .300 | | .300 | |
| Duct smoke detector (PAD300-DD) | | .300 | | .300 | |
| Duct detector (PAD Series*-DUCT) *Note 7 | | .300 | | .300 | |
| Duct detector w/relay (PAD Series*-DUCTR) *Notes 4, 5 & 7 | | .500 | | .500 | |
| Duct detector remote test switch (PAD100-DRTS) | | 10.0 | | 15.0 | |
| Mini input module (PAD100-MIM) | | .200 | | .200 | |
| Speaker Module (PAD100-SM) | | .240 | | .240 | |
| Pull station module single action (PAD100-PSSA) | | .200 | | .200 | |
| Pull station module dual action (PAD100-PSDA) | | .200 | | .200 | |
| Relay module (PAD100-RM) | | .240 | | .240 | |
| Notification appliance circuit (PAD100-NAC) *Note 2 | | .200 | | .200 | |
| Twin relay-twin input module (PAD100-TRTI) | | .240 | | .240 | |
| Double input module (PAD100-DIM) | | .240 | | .240 | |
| One relay-one input module (PAD100-OROI) | | .240 | | .240 | |
| Zone module (PAD100-ZM) *Note 1 | | .240 | | .240 | |
| Remote LED (PAD100-LED) | | .240 | | .240 | |
| Remote LED with key (PAD100-LEDK) | | .200 | | .200 | |
| Single input module (PAD100-SIM) | | .240 | | .240 | |
| Addressable sounder base (PAD100 and PAD300) *Note 3 | | .200 | | .200 | |
| Addressable Low Frequency Sounder Base (PAD100 and PAD300) *Note 6 | | .200 | | .200 | |
| Addressable relay base (PAD100 and PAD300) | | .200 | | .200 | |
| Isolator base (PAD100 and PAD300) | | .150 | | .150 | |
| Isolator module (PAD100-IM) | | .150 | | .150 | |
| SLC alarm LED Current | n/a | n/a | | n/a | 36.0 |
| | | SLC Standby Current | | SLC Alarm Current | |

* Note 1: PAD100-ZM requires 24VDC power source. Standby Current = 15.0 mA. Alarm Current = 60.0 mA.

* Note 2: PAD100-NAC requires 24VDC power source. Standby Current = 3.0 mA. Alarm Current = 8.0 mA.

* Note 3: PAD Series-SB requires 24VDC power source. Standby Current = 4.0 mA. Alarm Current = 30.0 mA.

* Note 4: PAD Series-DUCTR requires 24VDC power source. Standby Current = 30.0 mA. Alarm Current = 60.0 mA.

* Note 5: When connecting the MS-RA/MS-KA/P/R power source, Standby Current = 45.0 mA. Alarm Current = 90 mA.

* Note 6: PAD Series-LFSB requires 24VDC power source. Standby current = 4.1 mA. Alarm Current = 156.6 mA.

* Note 7: PAD Series refers to PAD100, PAD200 and PAD300

SLC #__ Current Draw Worksheet for PAD100-SLCEs (PAD Protocol)
(Complete one for each configured PAD100-SLCE)

| Device Type | Qty | Standby (mA) | Total Standby (mA) | Alarm (mA) | Total Alarm (mA) |
|---|-----|----------------------------|--------------------|--------------------------|------------------|
| PAD100-SLCE Expansion Board (PAD Protocol) | | 60 | 60 | 60 | 60 |
| Photo detector (PAD Series* -PD) *Note 7 | | .300 | | .300 | |
| Photo/CO detector (PAD Series* - PCD) *Note 7 | | .300 | | .300 | |
| Photo/Heat/CO detector (PAD200-PCHD) | | .300 | | .300 | |
| Fixed heat detector (PAD Series - HD) *Note 7 | | .300 | | .300 | |
| CO detector (PAD Series - CD) *Note 7 | | .300 | | .300 | |
| Combination photo/heat detector (PAD Series* -PHD) *Note 7 | | .300 | | .300 | |
| Duct Smoke Detector (PAD300-DD) | | .300 | | .300 | |
| Duct detector (PAD Series* -DUCT) *Note 7 | | .300 | | .300 | |
| Duct detector w/relay (PAD Series* -DUCTR) *Notes 4, 5 & 7 | | .500 | | .500 | |
| Duct detector remote test switch (PAD100-DRTS) | | 10.0 | | 15.0 | |
| Mini input module (PAD100-MIM) | | .200 | | .200 | |
| Speaker module (PAD100-SM) | | .240 | | .240 | |
| Pull station module single action (PAD100-PSSA) | | .200 | | .200 | |
| Pull station module dual action (PAD100-PSDA) | | .200 | | .200 | |
| Relay module (PAD100-RM) | | .240 | | .240 | |
| Notification appliance circuit (PAD100-NAC) *Note 2 | | .200 | | .200 | |
| Twin relay-twin input module (PAD100-TRTI) | | .240 | | .240 | |
| Double input module (PAD100-DIM) | | .240 | | .240 | |
| One relay-one input module (PAD100-OROI) | | .240 | | .240 | |
| Zone module (PAD100-ZM) *Note 1 | | .240 | | .240 | |
| Remote LED (PAD100-LED) | | .240 | | .240 | |
| Remote LED with key (PAD100-LEDK) | | .200 | | .200 | |
| Single input module (PAD100-SIM) | | .240 | | .240 | |
| Addressable sounder base (PAD Series - SB) *Note 3, 7 | | .200 | | .200 | |
| Addressable Low Frequency Sounder Base (PAD Series - LFSB) *Note 6, 7 | | .200 | | .200 | |
| Addressable relay base (PAD Series - RB) *Note 7 | | .200 | | .200 | |
| Isolator base (PAD Series - IB) *Note 7 | | .150 | | .150 | |
| Isolator module (PAD100-IM) | | .150 | | .150 | |
| SLC alarm LED Current | n/a | n/a | | n/a | 36.0 |
| | | SLC Standby Current | | SLC Alarm Current | |

* Note 1: PAD100-ZM requires 24VDC power source. Standby Current = 15.0 mA. Alarm Current = 60.0 mA.
 * Note 2: PAD100-NAC requires 24VDC power source. Standby Current = 3.0 mA. Alarm Current = 8.0 mA.
 * Note 3: PAD Series-SB requires 24VDC power source. Standby Current = 4.0 mA. Alarm Current = 30.0 mA.
 * Note 4: PAD Series-DUCTR requires 24VDC power source. Standby Current = 30.0 mA. Alarm Current = 60.0 mA.
 * Note 5: When connecting the MS-RA/MS-KA/P/R power source, Standby Current = 45.0 mA. Alarm Current = 90.0 mA.
 * Note 6: PAD Series-LFSB requires 24VDC power source. Standby current = 4.1 mA. Alarm Current = 156.6 mA.
 * Note 7: PAD Series* refers to PAD100, PAD200 and PAD300

SLC #__ Current Draw Worksheet for SLCE-127s (Nohmi Protocol)
(Complete one for each configured SLCE-127)

| Device Type | Qty | Standby (mA) | Total Standby (mA) | Alarm (mA) | Total Alarm (mA) |
|---|-----|----------------------------|--------------------|--------------------------|------------------|
| SLCE-127 Expansion Board (Nohmi Protocol) | | 60 | 60 | 60 | 60 |
| Analog photo smoke detector (PSA) | | 0.325 | | 0.325 | |
| Analog photo smoke / fixed heat detector (PSHA) | | 0.325 | | 0.325 | |
| Analog fixed temperature heat detector (FHA) | | 0.325 | | 0.325 | |
| Analog rate of rise/fixed temperature heat detector (RHA) | | 0.325 | | 0.325 | |
| Analog photo DUCT smoke detector (DSA) | | 0.325 | | 0.325 | |
| Conventional initiating zone module - 4 inch mount (CIZM-4) *Note 1 | | 0.325 | | 1.000 | |
| Miniature contact module (MCM) | | 0.325 | | 0.325 | |
| Single contact module - 4 inch mount (SCM-4) | | 0.325 | | 1.000 | |
| Dual contact module - 4 inch mount (DCM-4) | | 0.325 | | 1.000 | |
| Monitored output module - 4 inch mount (MOM-4) *Note 2 | | 0.325 | | 1.000 | |
| Twin relay module - 4 inch mount (TRM-4) | | 0.325 | | 1.000 | |
| Short circuit isolator (SCI) | | 0.325 | | 2.34 | |
| Analog sounder base (ASB) *Note 3 | | 0.325 | | 0.325 | |
| Analog relay base (ARB) *Note 4 | | 0.325 | | 0.325 | |
| Isolator base (AIB) | | 0.325 | | 2.34 | |
| SLC alarm LED Current | n/a | n/a | | n/a | 27.0 |
| | | SLC Standby Current | | SLC Alarm Current | |

* Note 1: CIZM requires 24VDC power source. Standby Current Class A = 4.90 mA, Class B (8.5 mA). Alarm Current = 50.0 mA

* Note 2: MOM requires 24VDC power source. Standby Current = 1.60 mA. Alarm Current = 1.60 mA

* Note 3: ASB requires 24VDC power source. Standby Current = 5 mA. Alarm Current = 100 mA

* Note 4: ARB requires 24VDC power source. Standby Current = 5 mA. Alarm Current = 50 mA

10. Installation Notes

Circuit board assembly is mounted in the cabinet using four (4) fasteners as shown in the illustration below.

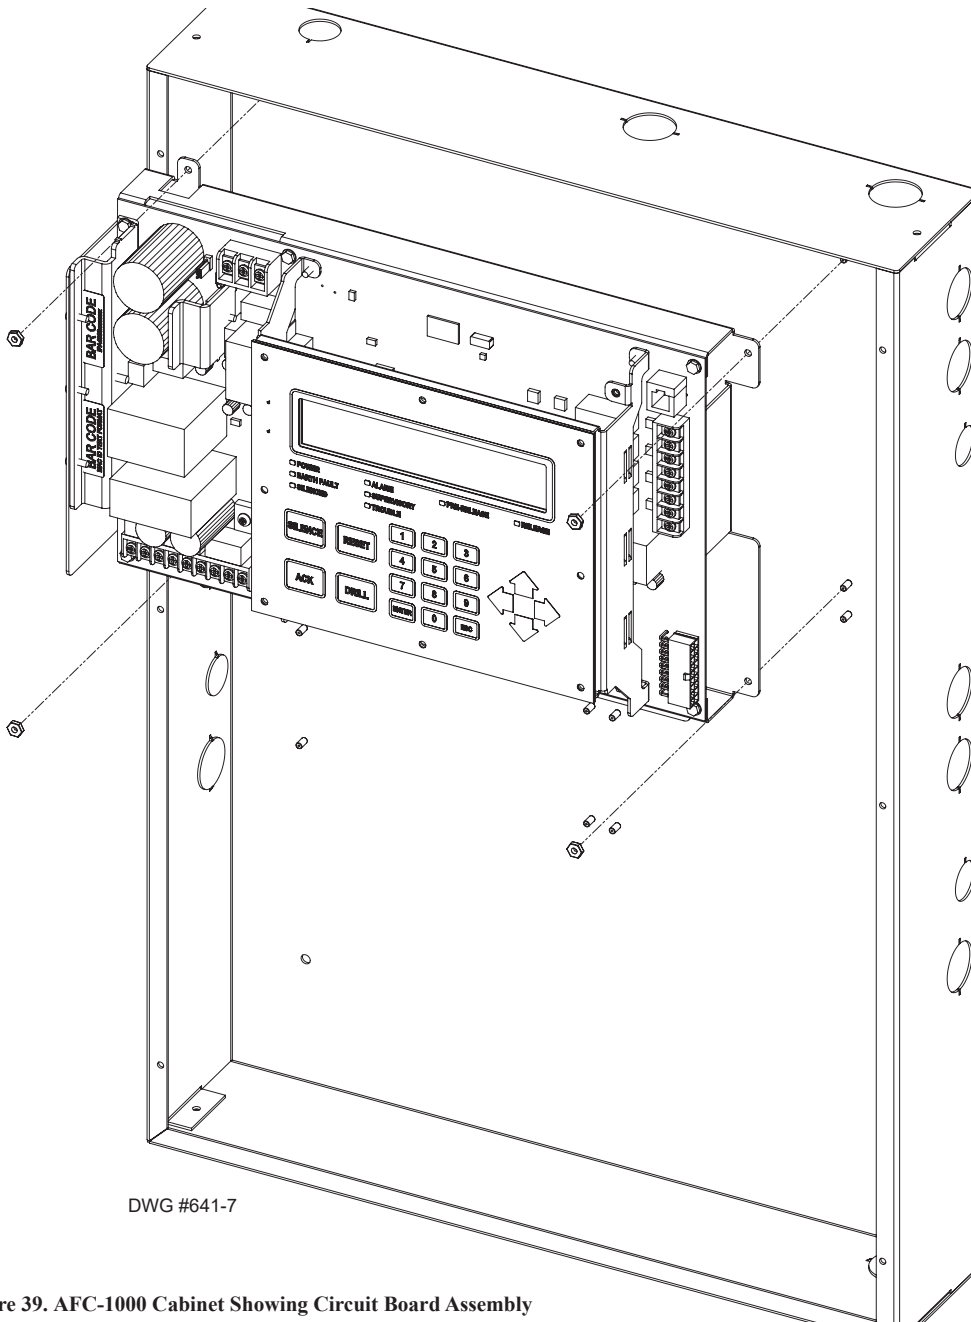


Figure 39. AFC-1000 Cabinet Showing Circuit Board Assembly